 
 
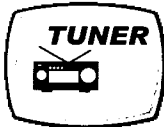 


UNIVERSAL & LEARNING

OPERATES ALL BRANDS

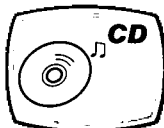

***Perfect
replacement***

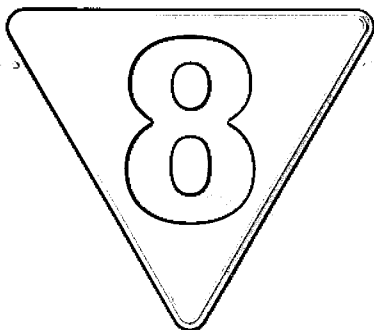

LCD DISPLAY



TIME

- Auto Search Function
- Combination of Several
- Remote Control Into One
- Pre-Programmed & Easy To Use

OPERATES ALL BRANDS

Introduction

Thank you for your purchase our Learning Digital LCD Universal Remote Control. You have selected a newly designed remote control with latest concept and fastest way to set up directly by the brand name and code No..

This universal remote control almost can work with all brands of Televisions (TV), DVD-players and DVR-players (DVD), DVB receivers and (digital) Satellite receivers and Cable box (DVB), Video Recorders (VCR), Tuner receivers (TUNER), Tape receivers (TAPE), CD-players (CD), Audio amplifiers and LD-players and other Audio (AUX).

You can use Auto Search to scan the code library in case that you can not find your device brand in the code list.

This Remote control also can learn a new code from an original remote control to supplement the codes in case of its shortage.

- Show View** function scans all channels to let you have quick view.
- All off** function can switch on or off all your devices with one button.
- Macro** function makes several sequent operations with one button for your home theater.
- Volume lock** can fix VOL+/VOL- button to control Amplifier only for your home theater.
- Device lock** can fix the device against changing by a new set up until you unlock it.
- Backlight for LCD screen** and **separate device backlight** to show you the currently working device.
- Low battery indication** to remind you when need to replace batteries.
- All the set up data will be stored in **back up memory** permanently, you don't need to worry about data loss when you replace battery.
- Real time clock** to show you time, AM or PM.


Please enjoy the time with this new intelligent LCD Universal Remote Control.

Device Code Assignment

Bank	for Device	Initial code	Total of codes
TV	TV	048	488
VCR	VCR	075	182
DVB	Satellite Cable DVB	075	403
DVD	DVD DVR	026	190
CD	CD	035	124
TUNER	TUNER	039	114
TAPE	TAPE	067	134
AUX	AMP LD VCD	032	204

Total codes: 1839

 Key Functions

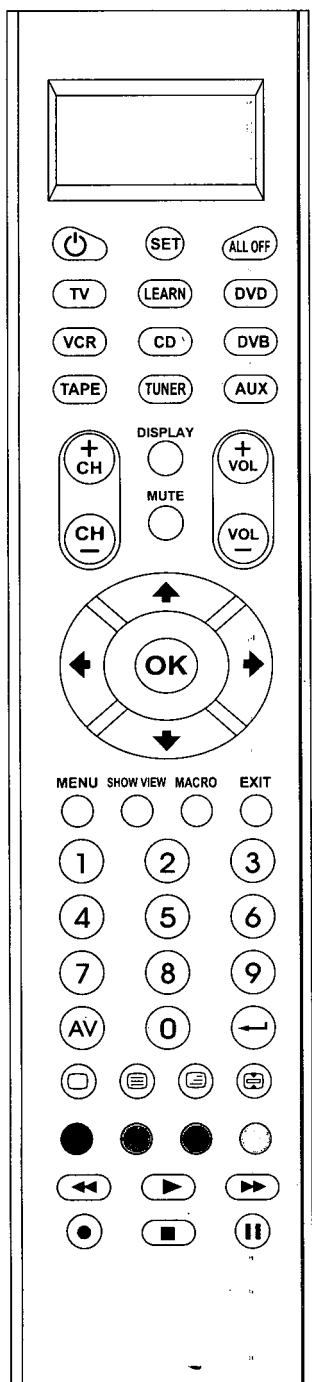

SET

Starting to set up the remote control or show you the status of LCD screen.

LEARN

Setting up learning functions.

TV VCR DVB CD DVD TUNER TAPE AUX

Selecting the device which you want to control.

POWER

Turning the device on or off.

AV

Works like the **TV/Video** key on your original TV remote, and **TV/SAT key** on your original satellite remote, **A.B** in cable and CD modes.

MENU

Works like the Menu or OSD (on-screen display) or Memory key on your original remote control.

CH ±

Works like the Channel Up and Down on your original remote control.

VOL ±

Control the volume like the Volume Up and Down on your original remote control.

◀◀ REW

Fast reverse.

▶▶ PLAY

Turn on your DVD, CD etc.

▶▶ FFWD

Fast forward

● REC

Record

Key Functions

STOP

Terminate your operation.

II PAUSE

Terminate the operation for a moment and standby.

SHOW VIEW

Scans all channels for you to quick view all programs.

All off

Switches on or off all your devices only with one button.

Macro

Let you make sequential operations of your home theater.

Display

Displaying info on the selected channel.



Key to mute the sound.

0-9

The number keys operate the same function as on your original remote control, and maybe also used for entering device codes when set up.

← Works like the enter on your original remote.

▲ ▼ ◀ ▶ OK EXIT

Works like the **UP**, **DOWN**, **LEFT**, **RIGHT**, **OK**, **EXIT** Keys on your original remote control as menu function. But during set up mode, they are only used as cursor, confirm and exit from programming your remote control.

 
- ☐ Television video
- ☐ TV and text mixed
- ☐ Teletext mode
- ☐ Page hold

RED YELLOW BLUE GREEN buttons are for TV Fast Text.

Device Set- Up

Direct Set - Up by Brand and Code

1. Turn on the device (e.g. **TV**) you would like to operate. If it is a VCR, Please insert a tape.
2. Press and hold **SET** key on your remote control. Then press (simultaneously) one of the device keys (e.g. **TV**)
3. Then release them, the Brand will be displayed on the screen.
4. You can press the **▲** or **▼** key to select the brand of your device (e.g. Your TV brand: **Life**)
5. Check the function of the keys. If none of the keys of your new remote control can work, or most of the keys work improperly, please try another code by **◀** or **▶** key, until all basic functions operate properly.
6. If you are satisfied with the code, just press **OK** key to save it. LCD shows **SUCCESS** and then finishes the set up.

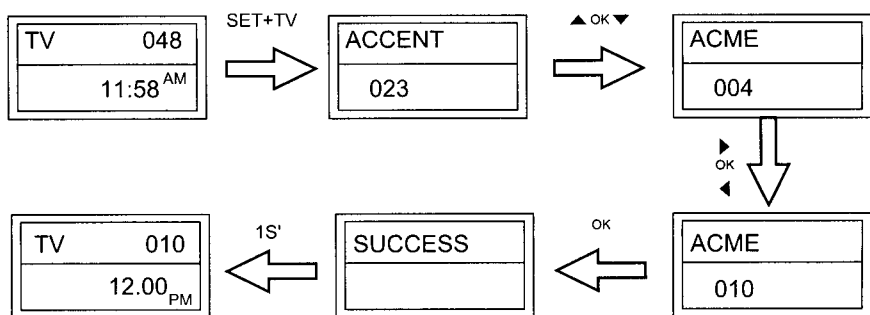

Remark:

1. To return to beginning status, press the **EXIT** key or the device key (e.g. **TV**, or **VCR**...)
2. You must point your remote control to the device that you want to control when you test the keys.
3. **▲ ▼ ◀ ▶ OK, EXIT** is only used to set-up your new remote control during set up process. You can't control your device as normal menu function at this moment until you quit from setting up.
4. If the device is locked, you must first unlock the device then setting up.

Set-up by Auto Search

 
If set-up by **brand and code** failed or you cannot find the brand name of your own device in remote control screen, you may use the Auto Search to find the correct code to operate your device.

1. Turn on the device (e.g. **TV**) you would like to operate. If it is a VCR, Please insert a tape.
2. Press **SET** key on your new remote control for more than 3 seconds, then release it.
3. Press the **▲** or **▼** keys to select **CODE SETUP** in the LCD menu, and press **OK** key.
4. The screen shows the **DEV SEARCH** in the LCD menu, and press **OK** key, then press device key to select your desired operation device(e.g. **TV**) and then

Device Set- Up

press OK key to start **Auto Search**. (You must point your remote control to your device at the moment)

5. See if the device reacts or not, once the device reacts, press any key to stop the search.
6. Test if most of keys work well or not. If most keys work not good enough, please repeat step 4~5.
7. If you find satisfied code please press **OK** key to save it and LCD shows **SUCCESS** and then show **DEV SEARCH**. You can press device key (e.g. **DVD**) again to finish SET UP or use **▲** or **▼** to select other set up.

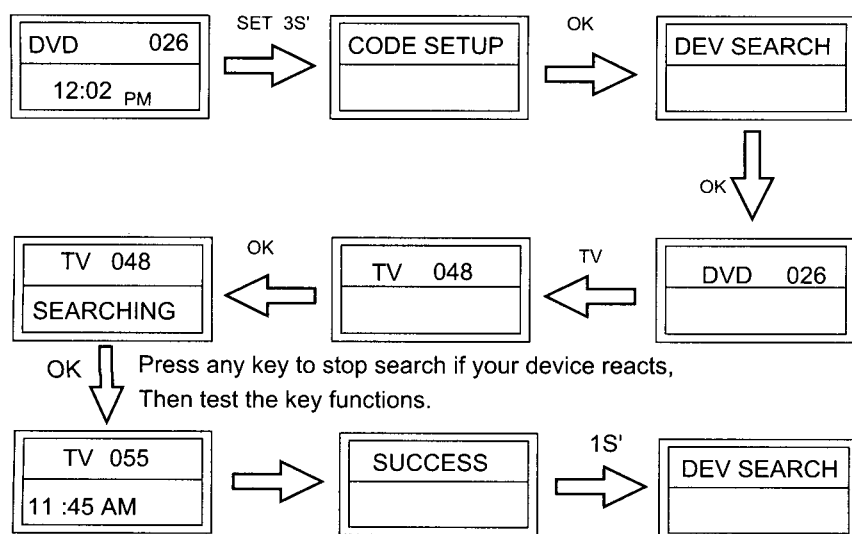

Remark:

 
1. If you do not stop the search in time when the device reacts, you may press the **▲** or **▼** key to search back to find the passed code.
2. **▲ ▼ OK, EXIT** is only used to set-up your new remote control during the Auto Search, you can't control your device for menu function at the moment until you quit from the set up.
3. When remote control searches through all codes, the remote control will stop at the beginning code of the search.
4. If the device is locked, you must first unlock the device then set up.

Set-up by Entering Code

1. Turn on the device, which you would like to control (e.g. TV).
2. In the back section of this manual, find the brand name and code No. of your device brand (e.g. **Lifetec 003,010,062**,).
3. Press **SET** key on your new remote control for more than 3 seconds, then release it.
4. Press the **▲** or **▼** keys to select **CODE SETUP** in the LCD menu, and press OK key.
5. The screen shows **DEV SEARCH** in the LCD menu, press the **▲** or **▼** keys to select **DEV SETUP** in the LCD menu, and press **OK** key.

Device Set- Up

- Then you press device key to select your desired operation device(e.g. TV) and then press **OK** key, you must now enter the **3-digit device code** (e.g. 003 for Lifetec TV)
- Press **OK** key to save it and LCD shows **SUCCESS**, and press **EXIT** key two times to exit from the SETUP mode.
- You check the function of the keys on remote control. If most keys on your new remote control do not work properly, try another 3-digit device code (e.g. 010...) from the list under the same brand. Repeat steps 3 to 7 until all the basic functions operate correctly.

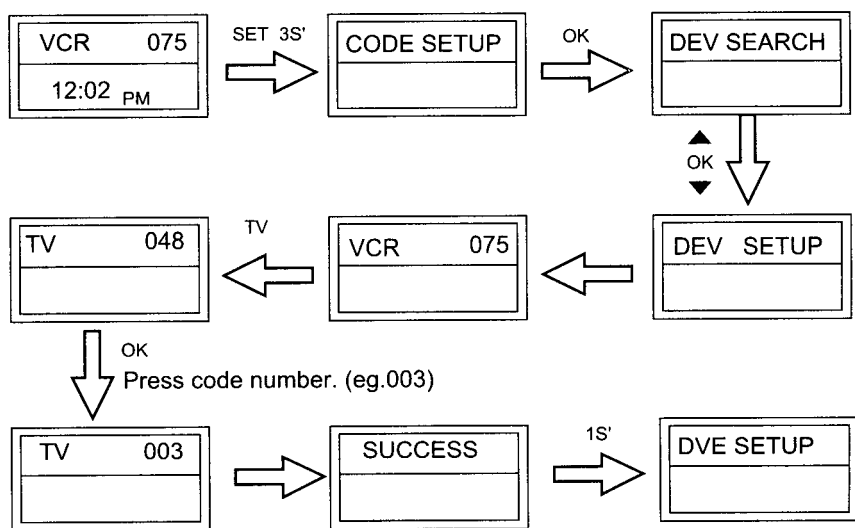

Learning

 
 
The **LEARN** feature is used to supplement the preprogrammed code list. The standard code list may provide most of the functions needed, but you can add a small number of additional functions for your remote control, or you can add a new code from a new remote control which is not in the code list. Under learning mode, you must need to prepare another remote control that you will take the codes into this remote control. You can select **LEARN KEY** to learn commands, or **DELETE KEY** to delete learn commands, or choose **DELETE DEV** to delete all commands under a device, or **DELETE ALL** for all learnt commands under all device in learning category.

Learn a Command

- Press a device key (e.g. **TV**) where you want to learn .
- Press and hold the **SET** key for more than 3 seconds, then release it. Or you can press **Learn** key for more than 3 Secends then you can enter into learning mode directly.
- Scroll **▲** or **▼** key to **LEARNING** in the LCD menu, then press the **OK** key.

Learning

4. Scroll **▲** or **▼** key to **LEARN KEY** in the LCD menu and then press **OK** key.
The LCD displays **SELECT KEY**.
5. Select the (target) key you want to learn (e.g. Power) on new remote control.
Then LCD shows "**WAITING**".
6. Point the transmitter of the original remote control remotes face to the receiver window of this universal remote by approximately 30mm apart.
7. Press and hold the original remote key (e.g. Power) until the LCD display **SUCCESS** for 1 second. If LCD display **FAILED**, please Repeat Steps 4-6.
8. Repeat Step 4-6 to learn more other keys or press device key (e.g. TV) to exit.

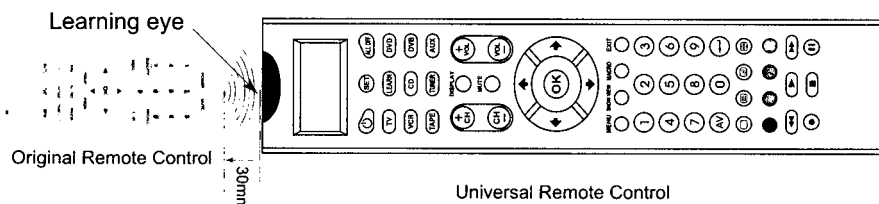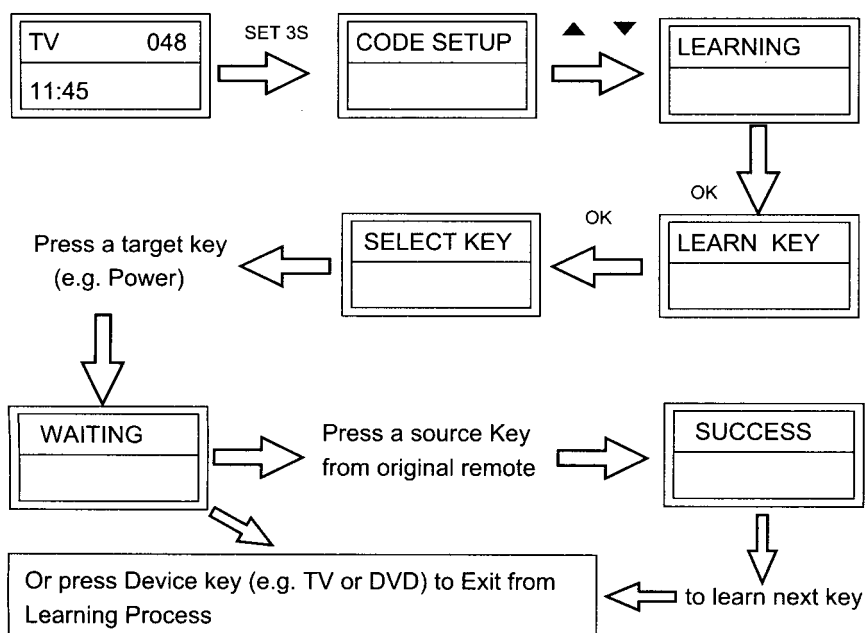

Remark:

1. A selected target key can be multi learnt from different source keys, it will store the final learnt signal only.
2. All usual function keys can be learnt except Show View, Macro, Set, Learn, All off .
3. Some code form may not be learnt by this remote control
4. You can learn about 100 keys totally for 8 devices.
5. If you want to Exit from Learning Process or Store the learnt buttons, Press Device Button (e.g. TV).

 
Delete the Learnt Key

If you like to delete a learnt command, you can follow the steps as below:

1. Press the device key (e.g. **TV**) where the command you like to delete.
2. Press and hold the **SET** key for more than 3 seconds, then release it.
3. Scroll **▲** or **▼** key to **LEARNING** in the LCD menu, then press OK key and the LCD display **LEARN KEY**.

Learning


4. Scroll ▲ or ▼ key to **DELETE KEY** in the LCD menu and then press OK key.
5. Press the key that you want to delete, the LCD shows SURE DELET and then press the **OK** key to confirm, the LCD will show **SUCCESS**.
6. Repeat Step 4 to delete other keys you want.
7. Press a device key (e.g. TV) to quit the delete operation when all desired remote commands are deleted.

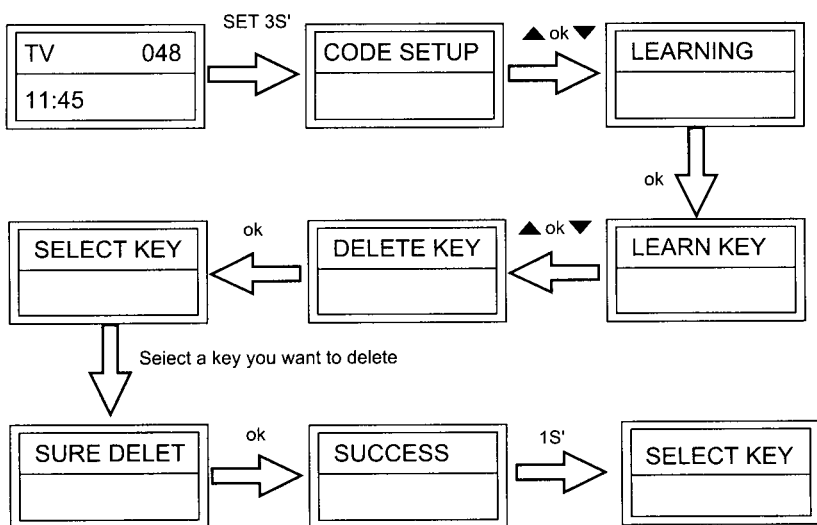


Delete All Learnt Command of a Device

If you like to delete all learnt commands in a device once, instead of deleting every key one by one, please follow below steps:

 1. Press a device key (e.g. **TV**) where you want to delete commands.
2. Press and hold the **SET** key for more than 3 seconds, then release it.
3. Scroll ▲ or ▼ key to **LEARNING** in the LCD menu, and then press the **OK** key and the LCD display **LEARN KEY**.
4. Scroll ▲ or ▼ key to **DELETE DEV** in the LCD menu and then press the OK key.
5. Select device you want to delete, then press **OK** key.
6. The LCD shows **SURE DELET** and then press **OK** key, the LCD shows **SUCCESS**.
7. Repeat step 5 to delete commands in other devices.
8. Press **EXIT** key (e.g. **TV**) to quit from deleting operation.

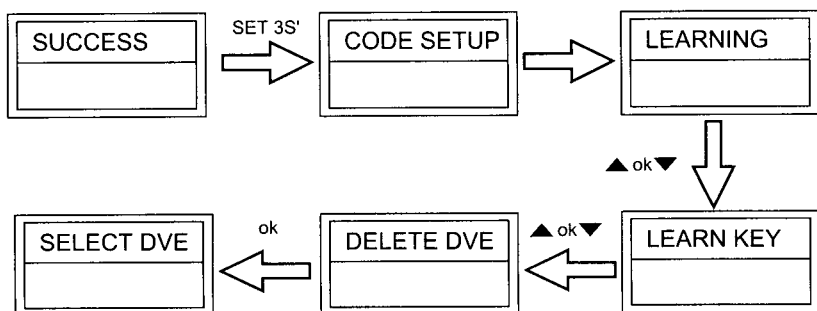

Learning

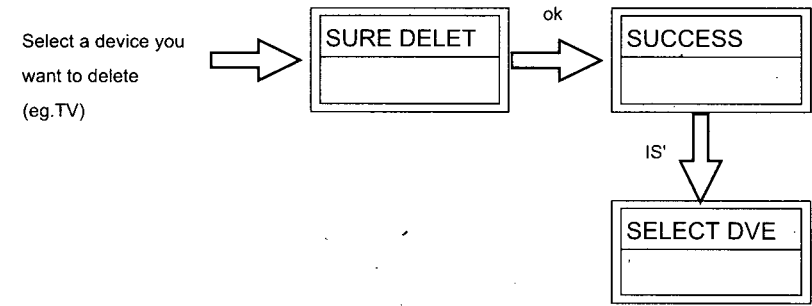 


Remark: It will take about 3 minutes for delete all commands in one device. If the commands are not so many, we suggest you delete commands one by one.

Delete All Learnt Keys

If you like to delete all learnt commands in the unit, please follow the below steps:

 1. Press and hold the **SET** key for more than 3 seconds, then release it.
2. Scroll **▲** or **▼** key to **LEARNING** in the LCD menu, then press OK key, LCD shows **LEARN KEY**.
3. Scroll **▲** or **▼** key to **DELETE ALL** in the LCD menu and then press OK key.
4. The LCD shows **SURE DELET**, then press **OK**,LCD shows **SUCCESS** to finish the deletion.

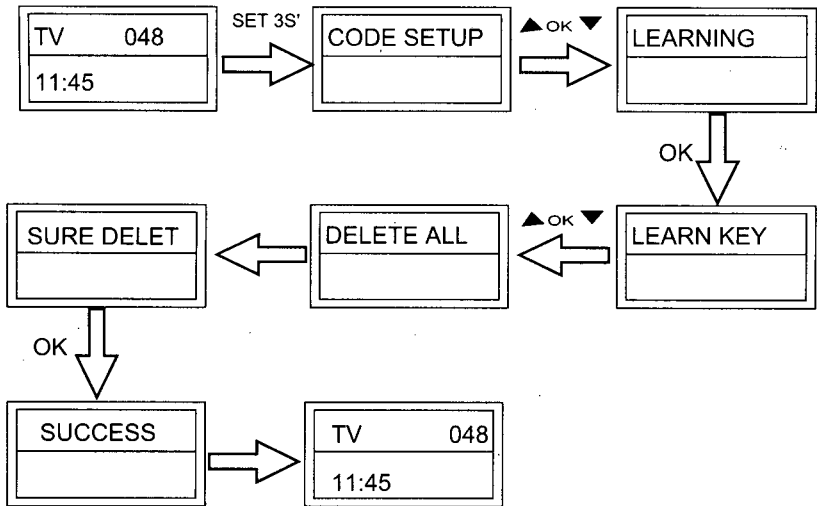

Macro Function

 
Macro Function

Set up Macro

Macro function let you make sequent operation for your home theater.

You can set up a Macro by following below steps:

1. Press and hold **SET** key for more than 3 seconds, then release it.
2. Press the ▼ or ▲ key to select **MACRO** in the LCD menu, and then press OK key.
3. Press the ▼ or ▲ key to select the **MACRO1** in the LCD menu (or **Macro2** or **Macro3**), then press OK key.
4. The screen shows **SETUP**, and then press OK key.
5. You can select the device and function key for a sequent operation that you like.
(e.g.: **TV+POWER+MUTE+AV**, **DVD+PLAY**, **VCR+RECORD**, etc. That means you want turn on the TV and shut off its sound, switch TV input to AV port, at the same time DVD start to play disc, VCR begins to record)
6. Press **OK** key to save the setting, LCD shows **SUCCESS** then exit to current setup state,
7. You can press any device key to finish set up or press the **EXIT** key to last state and use ▼ or ▲ to select other set up.

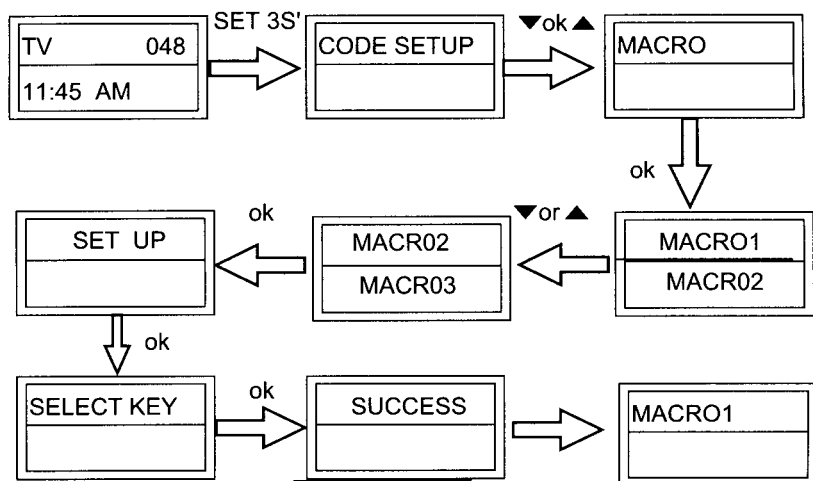

Select the device and function key that you like
(eg. TV+POWER+AV,DVD+POWER)

Remark:

1. You can set up to maximum 10 commands in a MACRO.
2. Make sure all the keys can send out signals, otherwise even if you programmed these keys inside the MACRO, it still can not work properly when you operate MACRO function. You can check those keys by pressing them to see the relative **Device** buttons flash or not before you set up MACRO.
3. Make sure the device must have correct conditions when you operate MACRO function. For example the disc must be put in DVD player and a video tape must be put in VCR when you want to play DVD or make a record by your VCR.

Macro Function

 
Operate Macro

Press and hold **MACRO** key and 1Key (or 2,3 Key), and then release them.

The remote control will send out a sequent IR commands that you programmed before.

Delete Macro

1. Press and hold the **SET** key for more than 3 seconds, then release it.
2. Press the **▼** or **▲** key to select the **MACRO** in the LCD menu, and then press the **OK** key.
3. Press the **▼** or **▲** key to select the **MACRO2** in the LCD menu, then press the **OK** key LCD shows **SET UP**.
4. Press the **▼** or **▲** key to select the **DELETE** in the LCD menu, then press the **OK** key.
5. LCD shows **SURE DELETE**, Press the **OK** key to confirm the delete and LCD display **SUCCESS** then back to last state.
6. You can press any device key to finish the delete operation or press the **EXIT** key to last state and use **▼** or **▲** to select other set up.

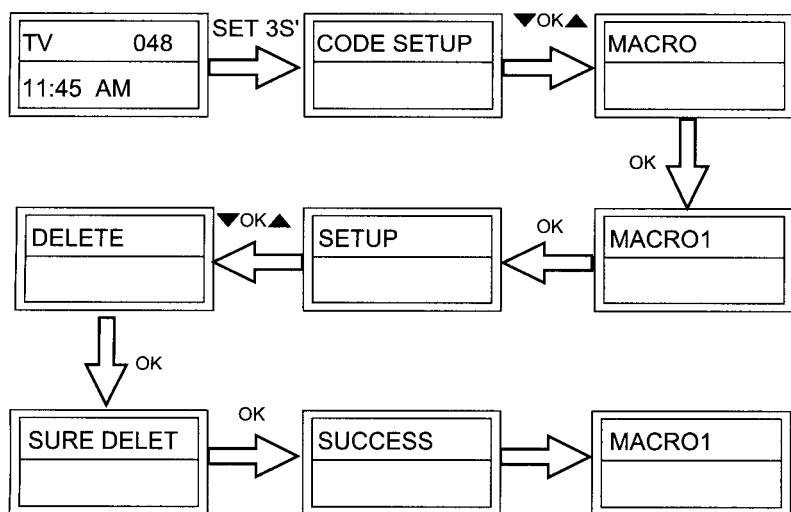


Other Set Up

A. Set up Clock

You can set up the clock in your LCD remote control and the clock will be displayed on the screen.

1. Press and hold **SET** key for more than 3 seconds, then release it.
2. Press the **▼** or **▲** key to select **CONFIGURE** in the LCD menu, and then press **OK** key.
3. Press the **▼** or **▲** key to select **TIME SETUP** in the LCD menu, and then press **OK** key.
4. Press the **◀** or **▶** key to move the cursor to select hour or minute or **AM/PM**, then press the number key to set correct time, and press the **◀** or **▶** key to select **AM** or **PM**.
5. Press the **OK** key to save the setting and LCD display **SUCCESS** for 1 second then exit to current setup state, if you enter errors the LCD screen shows **ERROR** for 1 second. You can press any **device** key to finish set up or press **EXIT** key return to the last state.

 
Other Set-up

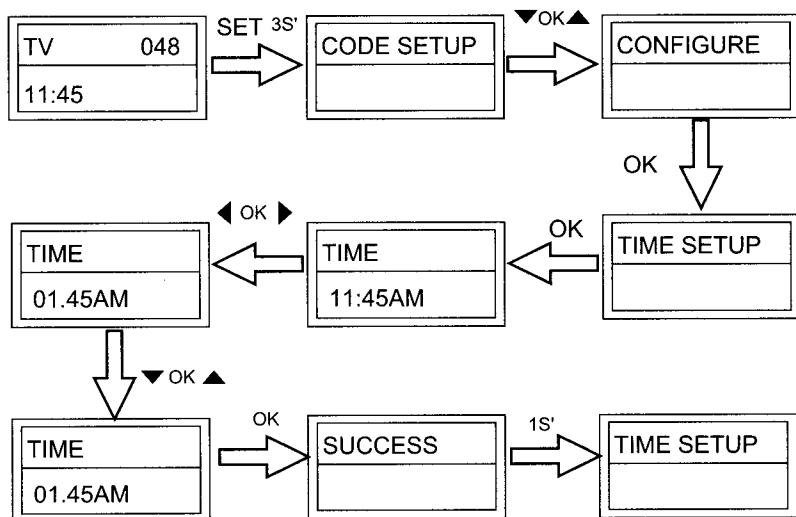

B. Volume Lock

This function makes you very convenient when you only use one device to adjust volume. For example, you may use your **amplifier** as your main volume control, then you can use this function to fix the volume and mute key of **AUX**, no matter which device you will use (even you will use TV, DVD, VCR etc), the volume and mute key on remote control still control the volume and mute of your amplifier.

 1. Press and hold the **SET** key for more than 3 seconds, then release it.
2. Press the **▼** or **▲** key to select **CONFIGURE** in the LCD menu, then press OK key.
3. Press the **▼** or **▲** key to select **VOL LOCK** in the LCD menu, then press **OK** key.
4. Press the device key to select the device you want to fix, such as **AUX**.
5. Press the **◀** or **▶** key to change to the **ON** or **OFF** mode.
6. Press the **OK** key to save the setting and LCD display **SUCCESS** then to current setup state, You can press any device key to finish set up or press the **EXIT** key to last state, or you can use **▼** or **▲** to select other set up.

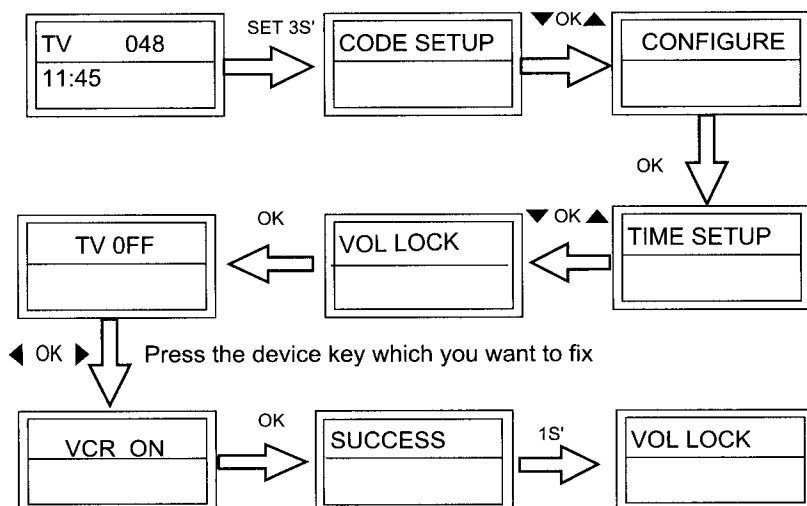

Other Set-up

 
Remark:

You can only lock one device for volume and mute of your new remote control. Then locked device will be unlocked when you lock on the other device automatically.

C. Device Lock

You can use Device lock function to fix current device code and this device code cannot be changed by brand and code set up or auto search. You can set it to the "OFF" to quit from this function.

1. Press and hold the SET key for more than 3 seconds, then release it.
2. Press the ▼ or ▲ key to select the CONFIGURE in the LCD menu, then press the OK key.
3. Press the ▼ or ▲ key to select the DEV LOCK in the LCD menu, then press the OK key.
4. Press the device key to select the device that you want to fix, such as TV (or DVD, or VCR)
5. Press the ◀ or ▶ key to change to the ON or OFF mode.
6. Press OK key to save the setting and LCD display SUCCESS then exit to current setup state. You can press any device key to finish set up or press the EXIT key to last state or you can use ▼ or ▲ to select other set up.

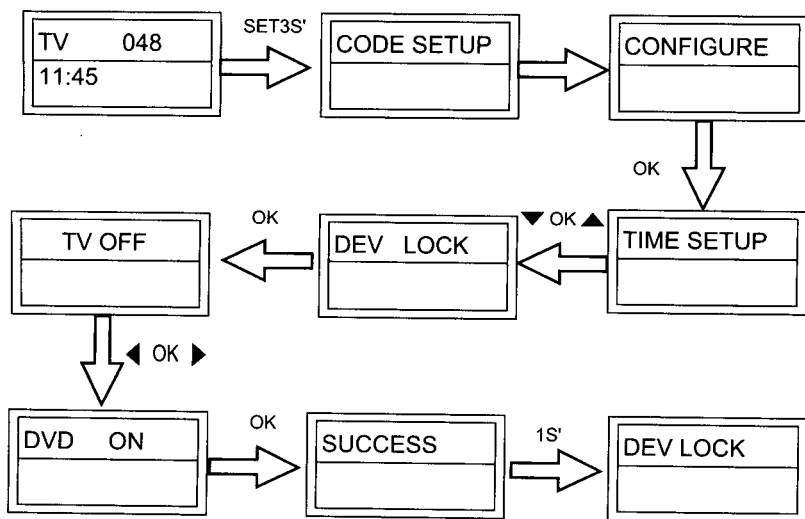

Remark:

You can fix all device codes and these device codes cannot be changed by neither Auto Search nor Brand Code Set up.

D. Background Light

If the **background light** is on, the background light will be lighted up when you press any key.

1. Press and hold the SET key for more than 3 seconds, then release it.

Other Set-up

2. Press the ▼ or ▲ key to select the **CONFIGURE** in the LCD menu, and then press the OK key.
3. Press the ▼ or ▲ key to select the **LIGHT** in the LCD menu, then press the **OK** key.
4. Press the ◀ or ▶ key to change to the **ON** or **OFF** mode.
5. Press the OK key to save setting and LCD shows **SUCCESS** then exit to current setup state, You can press any device key to finish set up or press the **EXIT** key to last state, or you can use ▼ or ▲ to select other set up.

E. Contrast Adjust

If you are not satisfied the screen contrast of your remote control, you can use below steps to change it.

1. Press and hold the **SET** key for more than 3 seconds, then release it.
2. Press the ▲ or ▼ key to select the **CONFIGURE** in the LCD menu, then press the **OK** key.
3. Press the ▼ or ▲ key to select the **CONTRAST** in the LCD menu, then press the **OK** key.
4. Press the ◀ or ▶ key to adjust contrast level, and then press the **OK** key when you satisfied.
5. Press the OK key to save the setting and the LCD shows **SUCCESS** then exit to current setup state, You can press any device key to finish set up or press the **EXIT** key to last state, or you can use ▲ or ▼ to select other set up.

F. Show View Function

SY004 has a **Show view** function to scan all TV or CAB/SAT channels for your quick view.

1. Press the device key to select the device (such as TV) that you want to operate.
2. Press and hold the Show View key about 1 second. When the device's LED flashes and it goes into Show View mode. The remote control automatically scans all channels for a brief quick view.

Remark: 1. The remote control must be pointed at the device until Show View mode finished.

2. If you want to exit the show view mode, please press any key.

G. ALL OFF

You can turn on or off all devices by this button.

Press and hold the **ALL OFF** key about 1 second and then release them. The remote control will send out all current power signal to turn on(or turn off) for every device one by one. Meanwhile the device key flashes to tell you which power signal is been sending.

 
Other Set-up

Remark: The remote control must be pointed to device that you like to control until the operation finished.

H. Clear All

Erase all the setting up data, and go back to the factory default settings.

1. Press and hold the **SET** key for more than 3 seconds, then release it.
2. Press the ▼ or ▲ key to select the **CONFIGURE** in the LCD menu, then press the **OK** key.
3. Press the ▼ or ▲ key to select the **CLEAR ALL** in the LCD menu, then press the **OK** key and LCD shows **SURE CLEAR**.
4. Then press the **OK** key to clear all settings and go back to original default settings.



Accent	023 376 393
Acme	004 010 313
Acura	010 309
Action	376
ADA	015
ADC	002 006
Admiral	001 002 003 020 050 054 109 187 196 197 234 308 376 408 426 454 465
Adyson	004 186 210 213 296
Agashi	185 187 212 214 296 377 381
Agazi	003 308
Agb	124
Agef	234
Aiko	004 005 010 023 296 309 376 382 392
Aim	023 381 391 400 416
Aiwa	088 213 318 339 007 009 010 011 012 023 052 062 069 070 071 134 142 170 185 221 296 309 314 317 340 376 377 378 381 382 391 392 400 401 405 407 414 433 434 449 453 471
Akai	185 382 012 023 101 212
AKI	023 026
Akiba	003 012 016 023 072 101 185 191 212 308 376 393
Akito	309 317 326 378
Akura	004 010 012 023 028 029 054 063 069 087 163 170 184 185 187 195 198 215 217 296
Alba	038 185 207 377 378 381 393 415 416 417 418 468 469 470
Albe	209
Albiral	165
Alcyon	382
Alkos	021 027 195 212 219 382
Alhor	023 052
Allorgan	004 198 207 214 228 382 416
Allstar	003 010 012 014 023 031 069 070 072 075 109 124 226 308 309 317 341 376 393 454
Amplivision	010 066 110 309
Amstrad	010 309 393
Anam	003 010 016 023 044 110 183 184 209 224 231 308 309 376 377 380 381
Anglo	010 015 023 198 275 309
Anitech	392
Ansonic	296
Antecno	004
Arcam	377 378 387 388 399 451 456
Arcam delta	046 127 140 204 207
Arcelik	451
Arc en ciel	016 023 052 170 195
Ardem	023 377 415 416
Aristona	159
A.R.Systems	212 377
Arthur Martin	001 017 018 019 050 111 234 407 438 440 441 442 465
Art-tech	023 044 052 182 187 195 209 377 380 381 401
ASA	010 309 376 377
Asberg	207 212 377 378 416
Astra	003 004 012 101 212 214 218 296 308 378 392
Astro sound	411
Asuka	004 021 022 023 052 170 182 197 296 377
Ataki	010 309
Atlantic	376
Atori	004 010 012 021 023 052 140 170 198 309 376 377 382 392 393 399 415 419 451
Autor	392 411
Audiosonic	004 182 198 231 233 376 382 392 411
Audio Star	376 382 400 426
Audioton	044 209 212
Aurora	001 003 004 021 044 058 102 126 209 234 308 376 377 382 396 400 453
Ausind	023 296 376 377 381 382 400 446 453
Autovox	140 185 186 200 232 409 453
AWA	001 234 377 381 426
Baird	409 417 418 426
Bang&olufsen	210
Barco	010 012 023 052 101 184 186 212 309 377 389 392 395 396
Barcom	004
Basic line	023 077 119 133 142 170 376 377 381 385 386 395 396 404 405 410 433 437 444
Bastide	
Baur	

Bazin	183 185 201 217 382 403
BBK	474 475 476 477 486 487 488
Beijin	263
Beknteknik	228
Beko	008 023 035 084 198 214 228 311 342 377 378 387 388 399 403 451 456 471
Beon	023 052 170 401
Best	114 115 198
Bestar	023 052 116 198 228 321
Bifonic	376 382
Bigston	376 393 400
Binatone	004
Black diamond	326
Black star	130
Blacktron	101 212
Blackway	101 212
Blaupunkt	009 113 120 136 179 385 386 415 433 446
Blausonic	207 382
Blue sky	012 023 101 212 228 377
Blue Star	101 121 378
Bondstec	130
Boots	004 026
Boston	208 218
BPL	023 096 101 121
Brandt	037 046 047 127 128 140 204
Brendstar	376
Brinkmann	023
Brion vega	001 023 052 058 170 208 234 343 377 391 408 426 454
Bristol	208
Britannia	004 296 377 382 406
Bruns	001 008 040 227 234 405 426 427 469 470
BSR	027 132 197 210 212 215 403
BTC	012
Bush	010 012 020 023 025 026 028 029 033 052 063 069 101 116 121 132 133 140 168 170 172 309 317 320 321 326 378 404 411
California	195
Capsonic	003 214 308 377 393
Carad	023
Carena	023 212 214
Carrefour	028
Cascade	010 023 309
Casio	023 201 377
Cathay	023 052 170
CBM	380
CCE	023
Centrum	325 326
Centurion	023 052 170
Century	001 191 234 426 468
CGE	044 054 130 132 187 198 204 209 376 377 378 380 381 392 399 401 403 468
CGM	226 233 376 377 393 399 411 451
Changhong	241 242 245 246 247 248 264 278 279 288
CIE	196 212 226 376 392 400
Cihan	214 377 378 381 403
Cimline	010 029 212 213 309
City	010 309
Clarivox	038 040 170 377 381 415 416 419 424 425 426 427 468
Clatronic	003 004 010 012 023 031 044 052 084 130 185 198 209 212 214 308 309
Cofadel	204
Colombia	228
Colombus	182
Computron	376 377 381
Concorde	010 309 376
Condor	004 022 023 052 084 101 182 184 187 198 211 296 376 377 380 381 393 401 469 470
Conrowa	285
Contec	004 010 028 030 031 211 212 217 296 309 376 382 393 446
Cont.ediso	204
Conti	377 381
Continental edison	037 046 047 112 127 140
Cosmel	010 309 376 419
Cosmos/Tokai	376 377
Crezar	182 226
Crosley	001 044 130 132 209 234 380 397 426 468
Crown/ Onwsaky	010 023 044 052 054 084 096 115 122 170 198 209

Crown/ Onwsaky	228 309 371 376 377 380 392 393 399 401 411 434
	451
Crystal	377
Cs electronics	004 012 130 296 392
CTC	130
Cte Clatronic.	015 187 198 207 210 212 226 377 380 382 392 393
	399 401 468 469 470
Curtis	381
	308 309 310 311 312 313 314 315 316 317 318 319
Cybercom	320 321 322 323 324 325 326 327 328 329 330 331
	332 333 334 335 336 337 338
	308 309 310 311 312 313 314 315 316 317 318 319
Cybermaxx	320 321 322 323 324 325 326 327 328 329 330 331
	332 333 334 335 336 337 338
Cybertron	012
Cymatic	378 382 415
	308 309 310 311 312 313 314 315 316 317 318 319
Cytron	320 321 322 323 324 325 326 327 328 329 330 331
	332 333 334 335 336 337 338
Daewoo	004 010 023 052 059 095 116 196 296 309 321 345
	376 377 381 382 391 392 400 453 468
Dainichi	012 212 296
Dansai	003 023 052 170 212 296 308 393
Dantax	035 149 162 198 213 326
Datron	196 211
Datsura	096 122
Dawa	023 195 377 381
Dayton	010 309
Daytron	023 196
Deawoo	023
Decca	004 011 023 026 031 052 124 170 377 381 382 415
	453 466
Decca(uk)	229
De Graaf	007 020 034 404
Deitron	023
Denko	185 214
Denver	211 212 376 377
Desmet	023 052 170 182 376 377 378 381 415
Diamant	023
Diamond	376 400
Digiline	023 213
Digital	212
Dixi	010 023 040 052 170 309 376
Domeos	377
Domland	219
Domoh	182 377
Doric	397
Drean	023
DTS	010 309
	004 023 090 126 127 132 140 161 185 195 197 207
	211 219 308 309 310 311 312 313 314 315 316 317
Dual	318 319 320 321 322 323 324 325 326 327 328 329
	330 332 333 334 335 336 376 377 378 381 382 395
	396 405 437 440 454 459 468
Dual-Tec	004 010 132 197 309
Dumont	001 004 015 018 019 234 377 380 381 401 426 438
	440 441 442 469 470
Dux	023 170 195
Dynamic	376
Dynisty	377 400
Dynatron	023 052 170
Edan Line	377 409
Elbe	023 038 109 158 180 198 275 378 382 397 408 415
	416 446 454
Eloit	001 234
Electa	121
Electro Tech	010 309 376
Elekta	101
Elektronska	207 378 415
ELG	023
Elin	004 017 019 023 052 170 181 186 197 233 296 376
	377 381 382 405 407 440
Elite	012 022 023 052 179 184 197
Elman	015 132 207 213 378 469 470
Elsay	184 229
Elta	010 296 309
Emerson	001 023 101 128 142 234 377 378 380 381 382 393
	426 441 468 469 470
Emperor	101
Engel	207 227 378 427

Erres	016 023 052 170
ESC	023
Estel	207
Etron	010 023 309 376 434
Eurocom	207 212 378
Euro-Feel	003 308
Euroline	089 170
Euroman	023 185 196 198 212 214 296 377 381 382
Euromann	003 004 052 115 308
Europa	023 228
Europhon	004 015 023 026 052 073 124 132 207 226 378 382
	415 468 469 470
Eurotronic	228
Expert	021 186 188 197 395 450
Exquisit	023
Fagor	378 379
Falcon	376
Fenner	010 116 184 191 195 212 309 321 376 377 381 400
Ferguson	036 037 038 051 053 082 112 128 164 170 232
Fidelis	182 211 376 377 381 382
Fidelity	004 020 023 069 097 296 317 378 382 388 392 395
	396 406 421 434 467 468
Filsai	217 376 382
Finlandia	007 020 111 129 181 186 200 403 404
	001 004 011 015 017 018 019 023 044 052 064 111
Finlux	124 132 158 168 170 181 209 225 234 314 315 376
	397 401 407 413 414 415 438 440 441 442 453 469
	470
First Line	004 010 023 027 052 063 130 183 296 309 376 377
	381 382 395 396 468
	001 004 007 019 028 030 040 041 084 132 195 198
Fisher	200 211 227 234 382 395 396 397 426 427 440 446
	447
Flint	023 052 149 183 184 187 196 214 377
	001 002 004 022 044 126 132 134 170 182 209 234
Formenti	296 376 377 378 380 381 382 393 397 399 401 403
	415 426 469 470
Fortress	001 002 234 426
Fraba	023 198
FranceConcept	184
Friac	023
Frontech	003 010 020 050 069 119 130 183 184 191 213 308
	309 317 376 404
Fujitec	377
Fujitsu	011 021 197 207 212 392 442 454
Funai	003 027 211 212 308 346 376 393 446
Galactex	382 393
Galaxi	023 054 084
Galaxis	023 198 377
Galaxy	380 382 399 401 433 438
Galeria	196 376
Galway	184
GBC	010 028 132 226 233 309 376 377 378 381 392 397
	400 411 434 446 453 465 468
GCM	195 212
GE	388
Geber	389 395 396
GEC	004 011 023 042 050 052 124 133 142 170 382 395
	397 403 404 415 446 453
GEC(UK)	186 224 229 231
Geleso	376 378 392 397 400 415 468 465
Geloso	010 020 132 231 309
General Technic	010 309 376
Genexxa	012 023 050 052 212
Germanvox	226
Giant	377 381 382 383 384
Gitem	377 381 385 386 387 388 389 390
GM	376 377 393
GMG	376 377 393 401
Goldhand	231 296
	004 010 013 020 023 052 085 094 130 132 170 172
Goldstar	198 206 210 223 296 309 326 344 376 378 377 381
	382 404
	003 010 011 023 028 029 052 069 094 112 116 128
Goodmans	154 170 206 230 308 309 317 321 326 376 377 378
	381 400
Gorenje	084 115 198 377 395 396 399
GPM	012 210 212 376 392
Gradiente	023
Graetz	050 142 143 188

Granada	004 007 011 020 023 028 032 041 044 052 055 065
	124 128 129 134 135 139 170 209 377 381 382 383
	384 397 403 404 406 415 417 420 424 429 446 456
	457
Grandin	010 012 023 101 121 170 184 309 378 395 450
Great Wall	393 419
Gronic	180 191 212 377 378 381 382
Grundig	009 018 023 044 092 102 117 118 136 137 185 209
	347 377 381 385 386 391 424 433 479
GTT	187 211 401
H-150a	276
Haaz	338
Halifax	003 004 296 308
Hamerstein	382 393 448
Hampton	004 183 226 296 382
Hanimex	392
	004 008 010 022 023 027 028 052 074 096 101 119
Hanseatic	132 142 170 198 234 275 309 376 377 382 385 386
	395 396 397 404 405 415 437 446
Hantarex	010 023 124 309 376 377 415
Hantor	023
Harwood	023 186 326
Hauptpaug	023
HCM	003 004 010 023 075 101 121 200 211 226 308 309
	376 378 382 411
Hemmermann	183 201 382 395 396
Hexa	378 425
Hilivox	140 204
Higashi	185 382
Highline	023
Hiline	376 393 434
Hinari	007 010 012 023 028 044 052 138 170 200 212 213
	227 230 309 326 376 377
Hisawa	012 101 121 149 212
Hisense	404 409
Hit	234
	004 011 017 020 023 024 028 034 042 045 046 047
	048 049 050 086 119 124 132 133 139 140 141 142
	143 145 186 224 257 258 280 313 348 378 382 391
	395 396 397 403 404 407 414 446 449 461 464
Hitachi	
Hitsu	185 212
Horizont	306 307
Hornlyphon	023 052
Hoshai	012 212 233 411
Huanyu	004 116 296 321
Hunter	432
Hygashi	004 296
Hyper	004 010 130 132 226 233 296 309 376 377 378 382
	392 403 411 434 461
Hypson	003 004 023 052 101 121 170 212 214 308 376 377
	381 393
Iberia	023
Ibervisao	188 207 378 395 396
Ibico	196
ICE	003 004 010 012 023 052 069 187 210 212 296 308
	309 317 392 393 434
ICES	296
IEG	382
Imper	376 377 381 391 392 393 394
Imperial	023 044 050 052 054 084 130 132 187 198 209 377
	380 381 393 399 401 403 468 378
Indesit	025 102
Indiana	023 052 170
Inf.Rem.Contr	413
Ingelen	050 188
Ingersol	010 309
	004 010 011 012 023 052 094 124 170 206 209 211
Inno Hit	222 309 376 377 381 382 392 397 411 415 434 453
	468
	003 010 062 068 069 088 104 108 112 116 155 157
Innovation	169 172 176 177 178 308 309 314 316 317 318 319
	320 321 322 324 325 326 327 328 329
Interbuy	010 110 130 309
Interdiscount	377 387 388 444 449
	001 016 023 050 052 130 140 142 170 198 234 376
Interfunk	377 381 382 387 392 395 396 397 401 405 415 417
	434 437 453 468
Internal	023
Intersound	182
Intervision	003 004 015 023 101 110 198 308 377 378 382 468

Intervision	469 470
Irradio	010 012 023 052 069 170 206 209 212 309 317 376
	377 378 381 392 393 424 434
Iskra	183 231 378 382 415 451 469 470
Isukai	012 023 101 212
ITC	004 132 184 204 233 378 382
ITE	207
ITL	196 376
ITS	012 023 052 069 101 121 212 296 317
	010 050 062 133 134 135 142 143 144 188 220 309
ITT	314 349 376 377 378 381 389 392 395 396 397 399
	400 401 402 403 404 405 406 407 408 409 410 411
	412 413 414
Ilt Schaub Lorenz	376 377 378 395 396 397 398
ITV	023 309 326
JEC	165
Jet Point	199 377 448
Jinlipu	378
Johnson	382
JVC	028 052 069 082 189 317 350 421 434 446 448 463
Kaiser	377
Kaisui	004 010 012 023 121 212 296 309 376 377 382 392
	401 411
Kambrook	377 382 393 449
Kamosonic	004 382
Kamp	004 296
Kapsch	021 050 188 197 200 397 440
Karcher	004 010 017 023 038 101 170 198 309 376 377 381
	382 399 404 411 416 442
Kasai	212
Kauasonic	432
Kendo	015 020 023 029 109 180 183 186 196 197 198 207
	213 376 397 382 408 454 465 468 469 470
Kennedy	021 132 182 197 231 387 397 454 468
Kennex	182 226 233
Kerlon	182 212 377 381
KIC	382
Kingsley	004 296
Kiota	393
Kitt	212 382 393
Kiyogin	377
Klarmax	378 382 415 416 417 418
Kneissel	023 175 180 182 196 198 212 275
Kobic	376
Koenig	397
Koertling	377 395 396 426
Kolster	023 052 191 210 214 377 378 381 382 416 468 469
	470
Konka	012 023 185 238 242 243 244 248 249 254 255 260
	261 285 287 289 303 313 373
Kontakt	204
Korpel	023 052 170
Korting	001 022 198 234
Kosmos	023
Kotron	226 393
Koyoda	010 309
Kronne	180 378 382
KTV	004 210
Kuba	186 195
Kuro	096 122 200
Kyoto	038 217 378 382 415
Lavis	211 415
Leader	376
Legend	376 377 381 382 393 419
Lenco	010 023 226 233 309 400 405 469 470
Lenoir	004 010 196 199 208 211 309 376 377 381 382 395
	396 400 411
Lesa	130 191
Leyco	003 011 023 027 052 170 214 308 377 393 453
LG	004 010 013 020 023 052 085 089 094 130 132 150
	170 172 198 206 210 223 296 309 326
Liesenk	170
Liesenkotter	023 179 195 377
	003 010 062 068 069 088 104 108 112 116 155 157
Life	169 172 176 177 178 308 309 314 316 317 318 319
	320 321 322 324 325 326 327 328 329 376
	003 010 023 062 068 069 088 104 108 112 116 155
Lifetec	157 169 172 176 177 178 211 214 308 309 310 311
	312 313 314 315 316 317 318 319 320 321 322 323
	324 325 326 327 328 329 330 331 332 333 334 335

Lifetec	336 337 338
LLOYD'S	376 382 393 397 424
Loewe	023 098 099 198 234 275 351 395
Loewe Opta	001 052 170 190 377 382 415 437 440
Logik	031 421 443
Luma	020 021 023 052 142 170 186 197 454 465
Lumatron	020 021 023 052 142 170 308
Lux May	023 052
Luxor	004 020 048 078 094 102 133 139 142 147 206 313 382 390 397 403 404 405 407 409 422
Maaz	417 418
Macch-Italia	377
Madison	023 182 212
Magnadyne	001 015 124 130 132 170 191 234 376 377 378 381 395 396 397 401 415 426 433 465 468 469 470
Magnafon	004 015 044 073 124 181 182 183 195 207 209 296
Magnavox	023
Magnex	377
Magnfon	377 397 382 415 438 469 470
Magnum	003 010 062 068 069 088 104 108 112 116 155 157 169 172 176 177 178 308 309 314 316 317 318 319 320 321 322 324 325 326 327 328 329 480 481 482 484
Mandor	003 308
Manesth	003 004 022 023 029 052 170 182 184 188 213 308 377 389
Manhattan	023
Marantz	023 052 170 187 195 377 381
Marech	182
Marelli	001 234
Mark	023 052 170 296 451
Marshall	212
Mascot	468
Matsui	004 005 010 011 014 020 023 026 027 028 029 031 052 063 069 092 124 148 149 165 170 174 213 215 309 317 376 377 378 382 393 395 396 397 404 455
Matsuka	382 393
Matsushita	066
Maxam	376 382 393
Maxell	376
Maxwell	377 415 418 417 469 470
MCE	376
Mcmmichael	042
Mediascreen	214
Mediator	016 023 052 170 195
Medion	003 010 023 062 068 069 088 104 108 112 116 155 157 169 172 176 177 178 211 308 309 310 311 312 313 314 315 316 317 318 319 320 321 322 323 324 325 326 327 328 329 330 331 332 333 334 335 336 337 338
MEGA	377 391
M-Electronic	004 010 017 019 037 050 052 069 110 111 116 140 170 309 317 321 376 377 378 381 395 396 397 400 401 407 415 426 438 440 441 442 465 468 469 470
Meletronic	023 296
Memorex	010 309
Memphis	010 011 114 309 419
Mercury	023 376 382 393 420
Metz	001 076 081 136 152 153 218 234 385 386 433
MGA	392 393 400 437
Micromaxx	003 010 023 062 068 069 088 104 108 112 116 155 157 169 172 176 177 178 308 309 310 311 312 313 314 315 316 317 318 319 320 321 322 323 324 325 326 327 328 329 330 331 332 333 334 335 336 337 338
Micron	382
Microstar	003 010 062 068 069 088 104 108 112 116 155 157 169 172 176 177 178 308 309 310 311 312 313 314 315 316 317 318 319 320 321 322 323 324 325 326 327 328 329 330 331 332 333 334 335 336 337 338
Minerva	018 102 136 185 209 385 386 424 433
Minoka	023 052
Mitsubishi	001 023 028 031 052 055 056 061 099 102 136 171 192 234 276 278 279 280 326 352 376 383 384 400 433 437 446
Mivar	004 044 074 094 124 193 198 206 209 275 290 291 292 293 294 295 374 375 382 415
Morgans	023
Motion	044 209
MTC	133 198 378 399

Multi System	170
Multitec	023
Multitech	004 010 015 020 023 028 044 046 130 132 170 198 207 212 233 296 309 376 377 378 382 392 415 437 446 468 469 470
Murphy	004 019 134 296 397
NAD	142
Nagota	403
Nagoya	207
Naiko	023
Nakashii	377
Nakimura	023
Namsunc	376
Naonis	020 109
Narita	400
National	065 102 194 284
NEC	023 028 057 331 376 400 416 446
Neckermann	001 004 009 020 023 052 084 119 133 170 198 377 381 382 385 386 391 399 403 404 444 465
Necstar	432
NEI	023 052 069 114 170 183 199 212 317 377 378 381 419
Nesco	130
Neufunk	023
Newmar	182 183 207 378 382
Newtech	010 023 052 309 377 382
New World	012
Nicamagic	004 296
Nikkai	003 004 011 012 023 052 114 165 170 186 205 211 212 296 308 382 393
Nikkei	226 233 377
Nikko	419
Noblex	023 184 199 200 376 400 446 447
Nobluko	004 015 018 044 209 296 380 382 424 438 468 469 470
Nogamatic	140 204
Nokia	050 062 064 133 134 135 142 143 144 188 220 314 315 353 376 377 378 381 389 392 395 396 397 399 400 401 402 403 404 405 406 407 408 409 410 411 412 413 414
Nordic	212 213
Nordmende	023 025 037 046 047 050 052 058 112 127 128 140 204 354 467 387 449 388 397
Nordvision	170
Nordway	217
Nortek	233
Nortex	377
Novatronic	023 183 187 212 226 376 377 393 400
Oceanic	050 142 143 389 390 395 397 402 403 404 405 407 409 414 450
Oceanic(F)	188 220
Octal	382
Octan	195
O.General	376 446
Okano	023 084 187 198 233 399
Olympic	376
Onceas	004 196 211 376 382 468
Onida	381
Onwa	070 196 212 393 401 434
Opera	023
Orava Slov	377 378 426
Orava/OTF	376 377
Orbit	023 052
Orient	376 377
Orion	010 014 022 023 027 029 031 052 063 076 100 124 143 148 160 170 172 213 309 326 355 376 377 391 393 395 396 402 403
Orion Hungary	377 381 402 403 421 422 423
Orline	023
Ormond	172 326 377 415
OR-ON	411
Orsowe	207 377 381 393 415
Osaki	003 004 005 011 012 023 075 166 308 377 381 393
Osio	023
OSO	012
Osume	011 030
Other Line	415
Otto Versand	002 004 009 022 023 028 052 077 112 119 121 122 132 133 140 142 170 376 377 381 382 385 386 388 391 396 397 404 405 433 437 444 446 451

Pael	004 181 185 296 382 424
Palladium	004 013 023 084 198 399
Paisonic	023 377 381 382 392 393
Panama	003 004 010 023 166 296 308 309 377 381 393 468
Panashiba	376
Panasonic	023 050 065 066 067 068 102 125 142 143 152 153 194 266 286 316 356 385 386 397
Panavision	023
Panavox	376 377 397
Panavision	393
Panda	267
Panorama	376 382 392
Panoramic	387
Pathe Cinema	004 022 038 074 132 182 207 211 228 275 296 378 382 399 415 416 425
Pathe Marconi	038 046 047 127 140 204
Pausa	010 309 376
PCM	211 377 381
Perdio	005 011 022 023 182 207 213
Perfekt	023
Pershin	424 425
Philharmonic	185 382
	001 023 044 054 130 132 187 198 209 234 376 377 378 380 381 395 396 397 399 401 403 416 426 446 468
Philharmonic	004 166
	001 004 016 023 039 042 044 052 089 090 112 116 132 142 156 170 195 219 234 321 323 357 377 381 382 385 386 391 401 416 417 426 449 472
Philips	001 023 052 170 182 195 198 234 296
Phoenix	001 016 023 052 170 195 219 234 296
Phonola	037 050 052 140 146 170 198 216 358 377 381 405 449
Pioneer	198
Pionier	003 023 052 308 376 397 403 415 465 468
Plantron	305
Polar	010 211 309
Poppy	377
Portland	020 124 142 182 197 207 209 212 397 403 415 465 468 469 470
Prandoni-Prince	004 166
Precision	394 432 435
Premier	010 050 309 376 382 393
Prima	376
Princess	048 186 195 217 230 313
Prinz	308 309 310 311 312 313 314 315 316 317 318 319 320 321 322 323 324 325 326 327 328 329 330 331 332 333 334 335 336 337 338
PRO2	010 044 142 309 376 380 405
Profex	172 326 377 378 381 388 415
Profilo	023 052
Profi-Tronic	011 016 023 052 063 184 213 214
Proline	023 043 108 162 170 172 198 296 311 320 326
Prosonic	003 004 010 015 023 052 114 130 132 133 166 170 308 309 377 381 451
Protech	023 170 326
Provision	016 023 052 069 170 195 234 317 377 381 391 400 417
Pye	208
Pygmy	010 309
Pymi	392 469 470
Qual Craft	130 397 469 470
Quasar	003 004 017 018 019 023 027 031 052 077 130 132 136 142 151 170 206 308 326 377 381 382 393 395 396 405 424 433 437 438 440 441 442 444 447
Quelle	028
Questa	023
Radialva	016 023 039 052 170 195 377 381 391 417
Radiola	001 023 124 130 191
Radiomarelli	017 019 181 188 395 397 440 442
Radionette	023
Radio Shack	185 211 451
Radioton	008 023 052 198
Radiotone	307
Raduga	018 028 397 404
Rank	018 397 404
RBM	259
Rc	032
RCA	023 377 381 393 437
Recor	307
Record	

Rectiligne	023
Redifusion	142 397 405
Redistar	023
Reflex	023
Regente	376
Revox	023 052 170 190 198
REX	003 020 021 050 109 158 197 308
RFT	001 008 040 198 227 234 275 426 451
RIZ	378
R-Line	023 052 170
Rm-d	268
Roadstar	003 010 012 023 226 233 308 309 359 376 377 381 392 411
Rob. Electr.	426 427
Robotron	001 227 234
Rowa	376 382 393
Rowsonic	382
Royal	376 381 382 392 393 401
Royal Lux	198
RTF	001
Rubin	304 306 307
	001 037 046 047 050 059 112 124 127 128 140 142 143 204 360 376 377 378 383 387 388 389 397 400 403 415 449 467
Sacca	038
Sadec	212
Sadko	307
Sagem	101 184
Saisho	003 004 010 014 029 031 124 183 213 215 308 309 382 392 400 416 456
Saito	207
Sakura	376
	020 048 050 094 096 108 109 119 122 129 132 133 135 139 142 186 206 313 314 320 361 377 389 403 404 405 406 407 409 413 414 441 465
Salora	015 044 073 124 181 207 209 211 380 398 415 416 424 438 469 470
Sambers	003 004 010 011 023 031 052 084 091 094 105 106 161 166 170 173 198 199 206 296 308 309 362 376 377 381 382 399 448 453
Samsung	004 296
Sandra	195 231 382 415
Sandra Color	428 429
Sankyo	023 052 183 196 212 376 377 409 411 434
Sansui	188
Sanwa	004 007 011 017 019 023 028 030 031 032 040 041 044 074 096 128 132 135 161 198 200 244 252 275 278 296 363 376 382 397 409 410 426 427 429 440 446 447 453 457 458 461
SAR	377 378 382
Save	023
SBR	016 023 042 170
Schaub Lorenz	050 142 143 188 220
	004 012 023 039 052 069 072 126 130 132 140 161 170 317 329 372 376 377 381 382 378 391 392 395 396 397 403 404 417 434 454
Schneider	195 212 219
Schneider France	182 377
Scott	003 004 015 023 028 040 044 089 130 132 170 296 308 326 377 378 380 381 382 468 469 470
SEG	023 201 234
SEI	001 014 015 027 050 076 124
SEI-synudyne	020 021 028 050 109 132 158 197 364 377 378 381 388 391 408 446 454 465
Seleco	471
Semp	010 309
Sencora	182
Senday	165 205 212 420 456
Sentra	184 212
Serino	377 378
Set	002 008 028 030 060 202 243 365 420 421 446 195 196 377
Sharp	212
Shivaki	027 212
Shiwan	376 377 381 391 393 430
Shorai	431 432
Shov	023
Show	001 015 124 132 180 191 234 397 415 426 469 470
Siam	038 207 378 416
Siarem	433
Sicatel	
Sice	

Sidec	378
Siel	380
Siemens	009 023 030 136 179 366 385 386 415 424 429 433 447
Siera	023
Sierra	016 052
Siesta	161 198
Siima	377
Silva	023 211 212 224 296 376
Silver	028 392 393
Simtel	377 392 393 411
Singer	001 015 023 130 132 180 188 191 204 211 234 338 376 377 381 382 397 415 434 426 450 468 469 470
Sinudyne	001 014 015 023 027 029 076 132 170 201 377 391 392 395 396 397 426 454 469 470
Sirel	415
Skantic	050 139 147
Skay	411
Skyworth	239 271 272 273 301 338
Slava	382
S. Lorenz	376 377 392 395 396 397 399 400 405 407 409 411
Sogera	022
Sokol	306 307
Solavox	050 093 188 395 406 407
song	251 269 283
Soniko	214 217 233
Sonitron	007 135 198 382
Sonneclair	023
Sonoko	003 004 010 023 052 101 170 211 212 214 308 309 376 377 381 382 392 393 411
Sondolr	007 050 188
Sontec	023 052 161 170 196 198 210 220 377 399
Sony	010 011 028 030 031 077 107 128 131 166 203 237 302 309 367 444 445 446 449 460
Soundcolor	211 212 214 215
Soundmaster	226 376
Sound&Vision	012 015
Soundwave	023 052 170
Sowtech	437
Standard	004 010 012 022 023 052 166 182 183 191 196 309 376 382 392 468
Star	381
Starlight	170
Starline	228
Starlite	023 212 376
Starlux	196 226 376
Stenway	101 121 185 212
Stern	020 021 050 197 387 408 454 465
STM	221
Strato	023
Stvi	378 382
Sunic Line	182
Sunkai	010 023 027 063 183 211 212 213 309 377 411
Sunny	432 434 435 436
Sunstar	023
Sunwatt	377 381
Sunwood	010 023 052 309
Superla	004 296 378 415
Supersonic	409 411 434 437
Supertec	376 377 381 392
Supertech	023 119 212 226 233 296
Supertone	185 207
Supra	010 184 214 309 376 377 400
Supreme	438
Susumu	012
Sutron	010 309
Syc Line	376
Sydney	004 166 296 415
Sysline	170
Sytong	212 296
Tadistar	401
Taisho	207 213
Talent	433
Tamashi	212
Tandberg	081 158 387 415 454
Tandy	002 004 011 012 049 050 166 403 404 450
Tashiko	004 020 028 042 057 129 166 296 382 404 429
Tatung	004 011 023 026 052 124 166 170 229 382 415 433 453 466
TCL	196 240 241 250 253 274 277 297 298 299 300 478

TCM	003 010 062 068 069 088 104 108 112 116 155 157 169 172 176 177 178 308 309 310 311 312 313 314 315 316 317 318 319 320 321 322 323 324 325 326 327 328 329 330 331 332 333 334 335 336 337 338 483 485
Teac	023 376 377 381 382 437
Teak	190
TEC	004 010 049 130 132 166 309 376 377 378 382 468
Tech Line	023
Technema	182
Technica	392
Technics	066 194
Technisat	040
Technol	376 382 393 400 437
Tecnema	022
Tedelex	376 377 378 381 382
Teinel	377 378
Teinelsa	182 207
Teknant	211 376 377
Tele+	376 377 439
Teleavia	037 046 112 127 140 204
Telechrom	392 411
Telecor	023
Telefac	376
Telefunken	023 036 037 051 052 053 079 080 102 103 112 127 128 140 164 204 368 376 377 378 383 387 388 400 415 443 449 462 468
Telefusion	023
Telegazi	023
Telemester	022 023
Teleopta	226 376
Telepoint	377
Telesonic	023
Telestarr	023 376 393
Teletech	010 023 089 114 130 170 309 468
Teleton	004 021 081 119 133 166 197
Televideon	022 182 296 377 381 382 397 403
Telkom	377 378
Teira	377 378 388
Tempest	023 376 382 392
Tennessee	233
Tensai	010 012 019 022 023 027 052 184 185 207 211 213 217 325 376 377 378 381 382 392 400 440 442 468 469 470
Tenson	182
Tesla	180 207 416
Teslaslov	377 378 417 426
Tesmet	052
Tetran	182 197 378
Tevion	003 010 023 062 068 069 088 104 108 112 116 155 157 169 172 176 177 178 308 309 310 311 312 313 314 315 316 317 318 319 320 321 322 323 324 325 326 327 328 329 330 331 332 333 334 335 336 337 338 480
Texet	004 166
Thomson	004 023 037 046 047 051 052 053 059 102 103 112 127 128 140 164 167 204 331 369 387 388 417 423 424 449 467
Thorn	011 019 023 036 038 055 082 112 128 142 165 170 232 413 456
Thorn F.	377 381 382 384 385 386 387 388 389 391 393 395 396 397 403 405 406 409 410 413 415 416 421 424 433 437 440 441 442 443 444 445 446 447 448 449 450 452 453 454 455 456 457 458 459 460 461 462 463 464 466
Tibishi	376 382 392 393
Tobo	376
Tokai	011 023 052 183 184 210 212 226 376 377 381 393
Tokyo	004 296 411
Tomashi	101 121 212
Tomita	382
Top Vision	210
Topvision	378
Toshiba	018 028 083 165 205 245 270 279 281 370 437 446 455 456 471
Towada	050 132
Trans Continens	023 377 415 465
Transonic	023 377 381 393 401
Transtec	296
Trevi	199 226 233 376 392 411

Triad	377 381 416
Trident	166 432
Trilux	377 451
Tristar	421
Triumph	014 023 083 124 181 211 226 438
Trivision	376
Tsoshi	212
Uher	021 022 023 044 050 052 181 184 190 195 197 198 209 403
Ultravision	416 467
Ultravox	001 004 015 023 130 132 134 182 183 186 191 201 234 296 377 381 382 397 426 433 437 465 468 469 470 471 472
Unic Line	023 182 183 212
Unic Radio	180 188 228 378 382 405 415
Uniden	212
United	023 089 170 326
United Satellite	228
Universum	003 017 019 023 052 084 103 111 115 123 130 132 170 198 206 209 308 314 376 377 378 381 382 385 386 389 393 395 396 405 407 424 429 433 437 438 440 441 442 444 446 447
Univox	023 038 188 191 195 207 234 377 378 381 395 416 426 468
Uranya	182 191 211 376 377445 469 470
Utax	211 382
Vanguard	186 212 376 382 404
Veco	376 377 381
Venus	262
Vestel	023 050 052 170 183 199 319 325 326 377 378 380 381 391 399 404 421 428 468
Vexa	010 023 170 212 231 309376 377 382 391 392 404 411
Viceroy	382 393
Victor	028 052 066
Videocon	381
Video Logic	185
Videologic	382 392
Videologique	004 012 296
Videomac	382 393
Videosat	130
Video System	023 052
Videotechnic	296
Videoton	184 217 377 378 382 401 402 403 404 415 422
Vidion	196 376
Visaelect	378 380 382
Visiola	004 180 296
Vision	022 023 052 182 376 377
Visorex	097 415
Vistar	049 188 389 407
Vityaz	306 307
Vortec	023 052 170
Voxson	001 020 023 044 050 052 109 189 197 208 209 234 426 465 469 470
Walkie	197
Waltham	004 023 038 049 139 166 217
Watson	022 023 052 170 377 381 393 397 465
Watt Radio	004 015 038 132 187 201 210 231 296
Watradio	382 395 396 397 401 416 469 470
Wega	001 023 028 234
Wega Color	446
Wega Vision	446
Wegavox	376 401 468
Wellfund	233
Weltblick	023 052 170 182 377
Weston	132 378
Wharfedale	023
White	182
White	004 015 022 023 044 170 182 296 377 378 380 382 399 401 437 469
Windstar	101
Winston	376 377 411
Winternitz	376 400 461
World Tech	377
Xoceco	235 236 242 260
Xrypton	023 182
Yamishi	023 101 184 212
Yokan	023
Yoko	003 004 010 012 023 052 166 170 183 198 212 224 296 308 309 376 377 382 387 393

Yorx	012 185 196 392
Yumatu	376 377 393 401 473
Zanussi	020 021 109 197
Zirwatel	376
Zoppas	197
7el	256
Others	282

VCR

Accent	173 178
Adelsound	098
Admiral	171
Adyson	099
Agashi	172 178
Alostay	173
Alwa	001 002 003 004 017 100 101 102 103 104 105 106 165 166 173
Akai	003 005 006 007 008 009 019 063 102 105 113 121 145 146 172 174 175
Akiba	041 099
Akitan	107
Akura	003 013 041 099 102
Alba	004 014 015 016 017 019 041 099 101 103 104 105 107 108 109 110 111 113 165 166
Albiral	172
Allorgan	073 145 169
Allstar	114 115
Ambassador	019
Amstrad	002 022 023 099 101 108 116 117 173
Anglo	173
Anitec	174
Anitech	041 099 114
Anitsch	091
Ansonic	098
Aphel Sound	173
Aristona	115
Art Tech	174
ASA	025 026 086 106 115 173 174 177
Astra	173
Asuka	002 025 026 041 099 101 106 115 118 177 178
Atlantic	171 172 177
Audio Dyn.	176
Audiosonic	108 177 178
Audioton	019
Authentic	175
Autovox	174 177
AWA	106 108 119 120 172
Awatron	173
Baird	002 003 005 014 027 028 045 101 102 107 108 121 122 123 171 175
Bang & Olufsen	172 174 175
Basic line	004 014 019 041 099 103 108 165
Bauer-Bosch	174 180
Baur	026 032 172
Beaulieu	174
Bestar	014 019 108
Black Panther	108
Black panther line	014
Blaupunkt	026 029 030 031 032 039 071 115 125 126 127 128 129 130 167 180
Blue sky	099 103 104 105 106
Bondstec	019 099 178
Brandt	066 067 102 131 132 133 134
Brinkmann	103 104
Brion vega	033 135 171 174 175 179
Broksonic	042
Bruns	178
Bush	004 014 015 016 017 041 052 099 101 103 104 105 107 108 109 110 113 136 165 166 178
Canon	137 180
Carena	103 115
Carrefour	138
Casio	101 173
Cathay	108
Catron	019
C. Edison	175 179
CGE	002 003 101 102 171 172 173 175
CGM	089 171
Cimline	004 041 099 103 165 178

VCR

Citizen	177
Clarivox	172 180
Clatronic	019 099
Combitech	017 105 166
Concorde	172
Condor	014 019 107 108 171 172
Conic	172
Corvus	173
Crosley	179
Crown/Onwasaky	014 019 041 099 108 114 173 178 179
Cybercom	165 166 167 168 169 170
Cybermaxx	165 166 167 168 169 170
Cytron	165 166 167 168 169 170
Daewoo	014 019 034 040 079 103 105 108 138 170 172
Dansai	041 099 107 108 178
Dantax	165
Daytron	014 108
Decca	002 003 026 101 102 104 115 142 143 172 173 174 175
De Graaf	026 035 115 122 139 140 141 147 171 173 174
Deitron	108
Dema Color	171
Denko	099
Desmet	172
Diamant	106
Domland	103
Domoh	177
Dual	003 026 101 102 108 115 165 166 167 169 170 172 173 174 175
Dumont	002 026 035 045 101 115 122 144 171 172 173 174
Dynatech	173
Edan Line	171
Edison	178
Elbe	062 108 118 171 173 176 177
Elcatech	099
Elin	021 145 172
Eisay	099
Elta	041 099 107 108 173 178
Emerson	053 099 138 171 172 173 177
ESC	014 019 108 145
Esselte	173 178
Etzuko	041 099
Eumlig	171
Euroman	172
Europhon	019
Excel	171
Fair Video	177
Fenner	019 172 178
Ferguson	003 028 039 043 046 057 067 101 102 108 123 133 134 146
Fidelis	172
Fidelity	002 099 101 116 145 173 178
Finlandia	026 035 045 101 115 122 139 140 147 171 174
Finlux	002 003 005 026 035 045 050 061 101 115 122 144 147 171 173 174 177 178
First Line	004 025 034 035 041 061 099 103 104 106 108 120 136 138 147 148 165 173 177 178
Fisher	019 044 045 118 122 141 149 150 171
Flint	004 103 165
Formenti	171 172 174 177
Formenti-Phoenix	026
Frontech	019 114
Fujitsu	002 101 173
Funai	002 101 173 178
Galaxi	101
Galaxy	002
GBC	019 041 172 178
GE	175
Geber	179
GEC	026 115 174 178 179
Geleso	178
Geloso	041
General	019 173 178 180
General Technic	004 017 038 073 104 165 166 167 169
Genexxa	122
Goldhand	041 099 178
Goldmedal	173 178
Goldstar	002 025 101 106 172 173 176 177
Goodmans	002 014 019 021 025 028 041 047 048 099 101 103 104 106 108 115 129 136 145 151 152 173 178

VCR

GR 15	178
Gradiente	142
Graetz	003 033 045 102 122 135 145 171 175 179
Granada	010 026 029 035 039 045 049 101 106 115 122 127 140 141 145 147 171 172 174 175 179 180
Grandin	002 014 019 025 041 099 101 103 106 108 177 178 179
Gronic	172
Grundig	028 029 032 039 041 050 051 052 054 084 104 115 127 128 129 133 153 154 155 180
Haaz	165
Hanimex	105 107
Hanseatic	025 026 103 106 108 115 172 174 176 177 178 179
Hantarex	174 177
Harwood	099
HCM	041 052 099 114 178
Hinari	004 017 041 052 053 098 099 102 103 105 108 114 136 148 152 156 165 166 178
Hisawa	004 103 105 165
Hitachi	002 003 026 035 037 098 101 102 115 129 139 144 145 147 173 175 179
H. Kardom	176
Hmv	175
Hornophon	115
Hyper	172 178
Hypson	004 041 099 103 105 108 165 172
Impego	019
Imperial	002 101 145 171 172 173
Ingersoll	098 103 145
Inno Hit	014 019 021 026 041 099 108 114 145 174 178 179
Innovation	004 017 038 073 165 166 167 169
Interbuy	025 106 178
Interfunk	026 045 099 115 122 172 174 179
Internal	108
International	108
Intervideo	173 177
Intervision	002 101 103 104 106 107 108 172 173 176 178
Irradio	025 041 099 106 115 171 174 177 178
ITT	003 005 033 045 055 056 102 121 122 135 141 145 157
ITT/Nokia	082 084 085 088 089 090 092 140 171 172 175 177 179
ITV	014 019 025 106 108
Jason	177
Jet Point	174
JVC	003 056 057 058 059 060 102 132 142 143 157 175
Kaiser	174
Kaisui	041 099 178
Kamar	174
Kambrook	173 174
Karcher	026 108 172
Kendo	004 005 006 014 019 034 063 099 103 104 106 113 121 146 165
Kansai	173 178
Kapsch	179
Kenwood	003 102 118 171 175 176
Kimari	149
K. Mart	177
Kneissel	103 104 105 106
Koerting	172 174
Kolster	172
Korpel	041 099
Kronne	176
KTV	177
Kuba	149 173 175 177
Kunya	175
Kuwa	029
Kyoto	099
Lavis	178
Lenco	014 178
Lenoir	171 172 177
Leyco	041 099 148 172 178
LG	002 025 101 106 108
Liesenkotter	174
Life	174
Lifetec	004 017 038 073 103 104 165 166 167 168 169 170
LLoyd	173
Lloyd's	173 175
Loewe	031 036 098 106 115 126 127 144 158 159 167 172
Loewe Opta	025 026 039 172 174 177 180

VCR

Logik	021 041 098 099 103 121 145
Luma	093
Lumatron	014 108
Luxon	173 178
Luxor	005 045 047 061 099 120 121 122 141 149 151 171 179
Magnadyne	171 172 174 175 177 179
Magnasonic	045 171
Magnavox	115 129
Magnfon	179
Magnum	182
Manesth	034 041 099 103 115 138 173 178
Marantz	026 039 047 062 103 107 115 118 127 151 160 174 177 180
Mark	019 108
Marquant	114
Marta	177
Matsui	004 017 025 053 064 098 101 103 104 105 106 107 111 117 145 148 156 165 166 179
Maxam	178
Maxell	178
Maximal	171
Maxwell	172
MCE	172
Mediator	026 115
Medion	004 017 038 073 103 104 105 165 166 167 168 169 170
M. Electronic	172 173 176 177 178
Melectronic	002 101 106 118
Memorex	002 010 025 044 045 101 106 122 140 141 149 171 173 177
Memphis	041 099 178
Metz	029 030 031 032 039 084 115 125 126 127 128 153 158 159 161 167 180
Micormay	104
Micromaxx	004 017 038 073 103 165 166 167 168 169 170
Microstar	004 017 038 073 165 166 167 168 169 170
Migros	002 101
Minerva	032 039 128
Minolta	175
Mitsubishi	002 026 057 061 115 119 120 143 162 172
Monexe	173
MTC	173
Multitech	002 019 026 041 099 101 114 122 172 173 174 178
Murphy	002 101 173 179
NAD	096 122
Nakamura	173
National	029 031 126 167
NEC	003 057 062 102 106 118 122 143 175 176
Neckermann	003 026 033 053 102 115 127 135 156 171 172 174 175 179 180
Necola	177
NEI	026 172 174
Nesco	041 099 101 105 173
Neufunk	103
Newtech	172
Nikkai	019 065 099 108 177
Nobliko	083 097
Nokia	003 005 010 021 033 045 055 102 108 113 115 121 122 135 140 141 145 147
Nordmende	003 056 057 066 067 102 131 133 134 143 148 157 175
Oceanic	002 003 010 101 102 115 121 122 140 141 171 179
Okano	004 063 099 103 104 108 113 114 165 178
Omega	173
Orava/Öff	172
Orion	004 015 017 048 053 064 098 103 104 105 107 109 110 148 152 156 165 166 172 173 175
Orson	002 101
Osaki	002 025 041 099 101 106 172 173 177 178
Osio	177
Osume	136
Otake	109 110
Otto Versand	026 032 115 172 174 176
Pael	180
Palladium	003 025 039 041 063 098 099 102 103 106 113 127 145 171 173 174 175 176 179 180
Palsonic	099 101 173 177
Panama	172
Panasonic	029 030 031 038 076 125 158 159 161 167 179

VCR

Panorama	177
Pathe Cinema	064 098 120 180
Pathe Marconi	003 102
P. Cinema	180
PCM	172 177
Penney	062
Pentax	035
Perdio	002 101 103 173
Pershin	180
Philco	062 171 172 173 175 176 178 179
Philips	012 026 039 054 056 077 115 127 129 160 172 174 180
Phonola	026 115 174 180
Pilot Sat	177
Pioneer	026 057 115 143 147 174 175
Plantron	179
Playsonic	171
P. Marconi	175
Portland	014 019 107 108 177
Prinz	002 101 148
PRO2	165 166 167 168 169 170
Profex	041 114 178
Profi-Tronic	115 145
Proline	002 052 101 133 134 136 173 174 178
Proscio	108 173 177
Prosonic	101 103 107 108 165
Protech	115
Provision	108
Pye	026 115 174 180
Qualcraft	173
Quartz	045 171
Quasar	177
Quelle	002 026 027 032 033 039 045 053 115 127 135 156
Radialva	099 106 115 140 177
Radiola	026 115
Radionette	177
Rank	102
Rank Arena	175
RCA	094
Realistic	171 173 177
Recor	172
Rediffusion	179
REX	003 056 102 157 175
RFT	019 026 099 129 178
Roadstar	014 021 025 041 099 106 108 145 173 177 178
Royal	099 114 178
Saba	003 046 056 066 067 081 102 108 131 132 133 134 151 157 175
Saisho	004 017 041 053 064 098 103 104 111 148 156 165 166 173
Salora	005 045 055 061 120 121 122 141 171 172
Sambers	173 177 180
Samsung	021 073 074 145 163 169 171 172 174
Samurai	019
Sansui	003 013 057 099 102 104 114 121 143 175 178
Sanwa	098
Sanyo	027 044 045 122 140 141 143 149 171 179
Savema	177
Saville	017 105 107 108 145 166
SBR	026 115
Scan Sonic	145
Schaub Lorenz	002 003 005 033 045 101 102 113 121 122 135
Schneider	002 004 014 019 025 026 034 041 099 101 106 108 115 145 165 172 173 174 177 178 179
Scott	171 177
Seaway	108
SEG	021 041 099 108 114 119 145 173 178
SEI sinudyne	026 098 115
Seleco	003 019 102 106 142 157 172 174 175
Semivox	103 138
Sentra	019 099 136 177 178
Sentron	041
Setron	099 178
Sharp	010 011 047 106 140 151 173 177
Shinko	173 178
Shintom	041 045 099 122 173 178
Shivaki	025 106 174 177
Shorai	098 148
Siarem	179
Siemens	025 032 039 045 050 106 115 122 127 128 150 155

VCR

Siemens	160 171 180
Siera	115
Silma	174
Silva	025 106 177
Silver	108 171
Simko	173
Singer	171 172
Sinudyne	026 098 115 172 174
S. Lorenz	171 177 179
Solavox	019 179
Sonamec	173
Sonitron	149 177
Sonneclair	099
Sonoko	014 108 171 172
Sonolor	010 140
Sontec	025 106 172
Sony	018 020 024 070 071 072 075 078 112 121 124 130 161 164
Sound Master	172
Soundwave	103 106
Southern Cross	172
Special	177
Ssangyong	099
Standard	014 108
Starlite	106 122 177
Stern	108 175
Strong	013 173 178
STZ	173
Sunkai	004 103 104 108 165
Sunstar	002 101 173
Suntronic	002 101
Sunwood	041 099
Supertec	172
Supertech	173
Supra	106 145 172 173 177 178
Sylvania	173
Symhonic	173
Symphonic	099 101
Taisho	004 098 103 148 165
Tandberg	032 053 108
Tandy	177
Tashiko	002 010 101 106 115 140 145 174 173 178
Tatung	002 003 026 101 102 103 104 115 120 140 146 173 174 175
TCM	004 017 038 073 165 166 167 168 169 170 181
Teac	100 101 102 106 108 115 173 175
Teak	172 173 175
TEC	019 099 107 108 171 172 173 178
Techline	178
Technics	029 031 167
Technisat	103 104
Tedelex	176 177
TEF	175
Teinel	172
Teknant	174
Teknika	173 177
Tele+	174
Teleavia	003 102 131 175
Telefunken	003 056 057 058 066 067 068 069 080 081 102 108 131 133 134 157 175
Telemeister	095
Telerent	173 175 177
Telestar	177 178
Teletech	099 101 108 114 178
Televideo	171 172 179
Tempest	019
Tenosai	041 099 178
Tensai	002 025 041 098 099 101 106 114 172 173 174 177 178
Tevion	004 017 038 073 103 104 165 166 167 168 169 170
T. Ferguson	175
Thomson	003 012 056 057 058 067 080 081 102 132 133 134 157 175
Thorn	003 045 084 102 106 122
Thorn F.	172 174 175 179 180
Tivo Hdd	012 078
TMK	087
Tokai	025 041 099 102 106 122 177 178
Tokiwa	099
Tonsai	041

VCR

Topline	104
Toshiba	003 026 034 056 061 102 115 120 129 138 157 170 172 175
Totevision	177
Towada	041 099 114 178
Towika	041
Traklon	019
Transonic	172 174
Triumph	053 156
TTR	175
TVA	019
Uher	025 033 106 135 145 175
Ultravox	033 107 108 135 171 172 179
Unic Radio	173 178
Unitech	021 145
United Quick Star	014 107 108
Universum	002 005 009 022 025 026 032 039 054 101 103 104 106 114 115 116 121 127 128 129 145 171 172 173 174 175 177 178 179 180
Univox	172
Uranaya	171 172 177 179
Vector	062 176
Vexa	172
Victor	057 058 142 143 175
Vidar	171
Video	062
Video E. Club	171
Videoon	004 017 038 073 165 166 167 169
Video Tec.	173 178
Vidital	179
Vidion	171
Watson	105 115 172
Wattradio	179
Weltblich	177
Weltblick	025 106 172
White	085 086
White Westinghouse	033 085 086 135
W. Westingh.	171 177 179
Xenon	093
Yamaha	175 176
Yamishi	041 099 107 108
Yokan	041
Yoko	019 021 025 041 106 145 172 173 177 178
Zanala	171 173 178
ZX	103

DVB

AGS	249
Akai	003 125 242
Akena	249
Alba	003 004 005 006 007 008 009 102 133 328
Aldes	007 010 011
Allantide	015
Allsat	012 014 055 125 242 372
Allsonic	010 029 309
Alpha	242 249
Ampere	024
Amstrad	017 018 019 021 023 154
Andover cablevision	258
Ankaro	010 029 243 244 309
Antron	004 009 014 247
Apollo	004
Arcon	017 024 025 027 056 243 325
Armstrong	021 242
Asat	125 242
AST	036
Astacom	249 250
Aston	164
Astra	003 021 030 031 032 033 034 093 284
Astro	009 011 029 040 041 042 241 247 309
Astrx	288
Atlanta	390 400
Athens	249
Audioton	009 055 247
Aura	034
Axiel	249
Axis	017 029 033 050 309
Barcom	025 243 325
Beko	381

DVB

Benjamin	342 343 344 345 346 347 348 349
Beon	375
Best	025 029 309 325
Blaupunkt	040 241
Boca	021 093 246
Boftec	350
Botech	351 352 353
Brain wave	044
Brandt	136 137 138 145 316
Broadcast	043
Brunor	126
BT	249 250
BT cable	260
BT satellite	003 022 145
Bush	005 006 012 045 102 133 328
Cabletime	261 262 263 264
Caliber	354 355 356 357 358 359
Cambridge	003 046
Camundosat	047
Canal+	140 174 222
Canal Satellite	245
Century	279
Channel master	007
Chaparral	098
Chess	318
Citycom	005 052 253
Clark	247
Clatronic	044
Clemens kamphus	015 083
Clyde cablevision	265
CNT	011
Colombia	249
Columbus	069
Commander	244
Commlink	010
Comtech	050 051
Condor	029 309
Connexions	039 047 048
Conrad	246
Contec	050 052 246
Cosat	055
Crown	021
Cryptovision	266
Cybercom	306 307 308 309 310 311 312 313 314 315 316 317 318 319 320 321
Cybermaxx	306 307 308 309 310 311 312 313 314 315 316 317 318 319 320 321
Cytron	306 307 308 309 310 311 312 313 314 315 316 317 318 319 320 321
Daeryung	039
Dansat	012 014
DDC	007
Decca	053
Delega	007
DEW	050
Diamond	054
Dijitürk	360 361
Discovery	249
Diseqc	250
Disk Express	243
Diskxpress	025 048 325
Distrisat	242
Ditristrad	055
DNT	039 125 242
Dong Woo	092
Drake	056 128
Dual	306 307 308 309 311 312 313 316 317 318 319 320 321
Dynasat	031
Echostar	026 039 057 058 060 073 149 150 151 156 249 318 391
EEC	015
Einhell	004 010 015 019 021
Elekta	011
Elta	004 008 029 055 125 242 309
Elta Sat	372
Emanon	004
Emme Esse	029 031 045 083 309
Ep Sat	005
Eurodec	062 063 337

DVB

Eurograff	368
Europa	022 242 244 246
Eurosats	021 372
Eurosky	021 029 031 309
Eurospace	061
Eurostar	008 021 080
Exator	003 004 009 247
Exper	389
Fenner	249
Ferguson	005 012 014 045 062 064 065 066 337
Fidelity	017 019
Filmnet Cablecrypt	267
Filmnet Comcrypt	267
Finlandia	005
Finlux	003 005 030 067 072 079 335
Finnsat	050 062 337
FM	372
Fobem	384 386
Force	148
Fortec Star	285 286
Foxtel	324
Fracarro	133 249
France Satellite/Tv	069
Freecom	004 068
FTE	022 024 051 087 246
Fuba	004 025 029 032 039 040 069 072 122 125 241 243 309 325
Galaxi	025 243
Galaxis	010 029 033 050 055 070 076 152 153 309 317 372
Galaxy	325
Gardiner	253
GEC	265
Geima	344
GMI	021 390
Gold	386
Goldbox	245 322
Goldbox-D+	222 233
Golden Cable	400 403
Goldmaster	362 363
Goldstar	068
Gooding	075
Goodmans	005 074 328
Granada	030
Grohusen	004 068
Grundig	005 009 040 045 075 077 086 124 154 235 241 251 252 324
G-Sat	014 015
Hanseatic	095 312
Hantor	004 019 044 092
Hanuri	011
Harting Und Helling	015
HEDY	277
Heliocom	024
High Performance	082
Hinari	007 008 014
Hirschmann	015 039 040 078 079 080 083 122 129 178 179 180 181 241 250 335
Hisawa	044
Hitachi	005 045 115
Houston	055 244 249
Humax	152 192 193 234 281
Huth	010 013 021 043 044 050 055 083 244 246
Hyundai	326
ICX	364
Imperial	102 133
Innovation	029 085 095 153 156 157 309 311 312 313 317 318 319 320 321
Intersat	377
Intertronic	021
Intervision	055
Italtel-Stream	223 224
ITT/Nokia	005 030 045 048 079 115 122 335
Jeemon	372
Jerrold	257 270 364
Johansson	044
Jok	250
Jsr	055 372
JVC	003 075 236
Kathrein	015 040 042 052 087 088 089 090 098 125 177

DVB

Kathrein	241 242 247 249 253 254 399
Kosmos	068 083 087 088 399
KR	009 247
Kreiselmeier	040 241
Kyostar	004 247
Kyoto	353
Labgear	327
Lasat	011 029 091 092 093 136 137 138 309 316
Lenco	004 022 068 094 244
Leng	044
Lennox	055
Lenson	336
Lexus	242
Leyco	003
LG	068
Lidcom	328
Life	137 153 317
	029 085 095 137 153 156 157 306 307 308 309
Lifesat	310 311 312 313 314 315 316 317 318 319 320
	321
	029 085 095 137 153 156 157 306 307 308 309
Lifetec	310 311 312 313 314 315 316 317 318 319 320
	321
Lion	015 061
Lorenzen	244
Lorenzen Inc.	401 355
Lorraine	068
Lupus	029 309
Luxor	019 030 115 122
Lyonnaise	337
Macab	062 337
Manata	249 250
Manhattan	005 011 045 055 249 250 372
Marantz	125 242
Mascom	011 088
Maspro	005 045 064 075 098 129 235 241 251
Matav	399 400 403
Matsui	003 075 145 235 241 250
Mb	095 312
Mediabox	245
Mediamarkt	021
Mediasat	033 245
	029 085 095 137 153 156 157 214 215 216 217
Medion	218 219 306 307 308 309 310 311 312 313 314
	315 316 317 318 319 320 321
Mega	125 242
Meletronic	253
Metronic	004 009 010 171 247 253 325
Metz	040 241
Micro	247
	029 085 095 137 153 156 157 306 307 308 309
Micromaxx	310 311 312 313 314 315 316 317 318 319 320
	321
	029 085 095 137 153 156 157 306 307 308 309
Microstar	310 311 312 313 314 315 316 317 318 319 320
	321
Micro Technology	015 034 061
Mirmtech	096
Minerva	040 075 235
Mitsubishi	005 040 145
Mitsumi	093
Morgans	021 093 097 125 242 246
Morgan sydney	338
Movie Time	269
Multichoice	172 324
Multistar	087 092 399
Multitec	318 319
Muratto	038 068
Navex	044
NEC	100 101
Network	014
Neuhaus	033 055 071 244 246 336
Newyork	389
Next	364 365 366 367 368 369 370 371
Nextwave	016 155 364
Nikko	021
Nimbus	096
	005 030 045 048 079 110 111 122 134 135 194
Nokia	195 196 197 198 199 200 201 202 203 204 222
	223 227 230 236 280 292 335

DVB

Nomex	339
Nordmende	004 005 007 011 062 065 123 337
Nova(Yenicag)	395 397 398
Novis	044
OAK	271
Oceanic	015 054 061
Octagon	004 008 009 050 244 247
Okano	021 083 087 236 237 238 239 399
Ondigital	186 229 230
Optex	052 055 372
Orbit	015 036
Orbitech	004 103 246
Origo	105
Osat	009
Otto Versand	040
Oxford	003 249
	005 012 014 040 045 064 074 099 107 112 130
Pace	154 186 189 191 195 204 205 206 207 208 209
	210 211 212 213 361
Pacific	054
Packsat	250
Palcom	007 032 069 071 336
Palladium	021 075 077 235
Paltec	032
Panasonic	005 045 154 183
Panda	005 012 241
Pansat	329
Patriot	249
Patriot Worldsat	003 249 250
	005 014 028 035 037 045 049 059 075 086 099
Philips	104 121 124 125 132 169 170 222 224 225 235
	237 238 241 242 243 244 245 246 247 248 249
	250 251 252 253 254 311
Phoenix	014 050 074
Phonotrend	010 055 083
Pilot Sat	372 373 374
Pioneer	245 272 273 275
Pk Sat	015
Planet	380
PolSAT	173 337
Polytron	052
Predki	044
Preisner	246
Premiere	055 140 245
Priesner	021
PRO2	306 307 308 309 310 311 312 313 314 315 316
	317 318 319 320 321
Profi	094
Profile	249
Promax	005
Prosat	006 007 010 102 133
Protek	015 054
Proton	015
Provision	011
Ptt Telecom	047
Pye	235
Quadral	007 010 029 246 249 250 309
Quelle	019 040
Quiero	173 337
Radiola	125 242
Radix	039
Rainbow	009 247
RC	364
RE	096
Rebox	330
Rediffusion	101
Redpoint	033
Redstar	029 309
Regal	350
Remoshack	296
Revox	096
RFT	010 103 125 242 244
Roadmaster	355 375 376 377 378
Ruefach	094
Saba	006 011 014 045 061 064 065 120 127 133 136
	142 143 144 146 250
Sabre	005
Sagem	062 337
Sakura	050 074
Salora	030 100 101 107 274

DVB

Samsung	004 027 078 272 399
Sat	007 017 036 038
Satbox	276
Satcom	043 095 106 312
Satec	014 045
Sateco	372
Satellite	390
Satford	043
Satmaster	043
Satpartner	004 009 011 044 068 083 247
Sch?cke	247
Schneider	049 248 250 252 254 309 313 317 318 319 320
Schwaiger	013 014 052 054 089 095 137 144 146 147 152 155 157 168 246 306 312 316 317 319
Scientific Atlanta SIs	255 256 268
Seemann	003 021 033 039
SEG	004 008 029 034 044 095 119 309 312
Seleco	055
Siemens	040 241
Silva	068
Skardin	033
Sky	154 182 190 191 220 221 278 282 283 323
Sky Digital	154
Skymaster	010 095 148 156 158 159 160 161 162 293 294 295 297 298 299 300 301 302 303 304 305 312 315 318 319
Skymax	015 125 242
Skyvision	055
Sony	020 154
SR	021 065 093
Starion	034
Starland	156 318
Starring	044
Star Trak	004
Stella	047
Strong	004 009 029 048 051 081 133 222 228 247 289 309 400
Sumida	021
Sun/Moon/Star	184
Sunny	355 376 379 380 381 382
Sunstar	021 093 107
Tandberg	062 337
Tandy	009
Tantec	005 045 064 069 071 336
Tatung	053 105 029 085 095 137 153 156 157 306 307 308 309 321
TCM	310 311 312 313 314 315 316 317 318 319 320 321
Techniland	043
Technisat	039 071 103 108 109 126 242 336 372
Teco	021 093
Telanor	007
Telasat	095 312
Tele+1	222 228 267
Teleciel	247
Telecom	047 372
Telefunken	004 045 131 136 137 138 145 250 316
Teleka	009 021 027 039 088 247 251
Telemaster	011
Telemax	091
Telesat	095 312
Telestar	071 336
Televes	005 185 187 188 338 340
Telewire	055
Telkom	350 383
Tempo	375 384 385 386 387
Termal	350 375 388 389 390 391 392 029 085 095 137 153 156 157 218 219 306 307 308 309 310 311 312 313 314 315 316 317 318 319 320 321
Tevion	005 065 084 131 139 145 173 245 249 250 337
Thomson	054
Thorens	005 012 014 045 064 066
Thorn	052
Tioko	368
Tochibo	350
Tofild	242 388
Tokai	005 043 055 249
Tonna	331 332 333
Topfield	239
Toshiba	

DVB

TPS	141 175
Triad	015 036 038 068 113
Triasat	072
Triax	040 071 136 242 336
Tristar	051
Tudi	259
Twinner	338 340
Ultravox	372
Uniden	114 287
Unisat	021 050 242
Unitor	025 044 243
Universum	040 067 075 079 235 241 335
Variosat	241
Variostat	040
Vector	015 061
Ventana	125 242
Vestel	350 383 393 394
Via Digital	135 139 231 232
Visiopass	335
Visiosat	044 055 156 163 164 165 166 167 318
Viva	244
Vivanco	334 341
Vortec	004 027 078
VTech	253
V-Tech	036 038 104 115
Way	291
Wela	246
Westminster Cable	260
Wevasat	005 015
Wewa	005
Winer	290
Winersat	044
Wisi	005 036 038 039 040 113 116 117 118 241 246
Wittenberg	017
Wolsey	082
Woorisat	011
Xsat	176 249
Yenicag	395 396 397 398
Yonsat	380
Yumatu	355 389 399 400 401 402 403
Zehnder	011 029 038 087 089 119 243 253 309 325 399
Zeta Technology	242
Zirwatel	351
Zodiac	009 247

CD

Adcom	006
Aiwa	007 008 009 098
Akai	010 011 012 013
Alba	014
Arcam	083
Asuka	015
Audiosonic	015
Bestar	016
BSR	017
Bush	018
California audio lab	019
Carrera	020
Classic	119
Condor	017
Crown	021
Cybercom	103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120
Cybermaxx	103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120
Cytron	103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120
Denon	022 023
Dual	015 024 103 104 105 107 108 109 110 111 112 113 114 115 116 117 118
Elita	105 108 113
Emerson	006 016 025
Fisher	026 027
Genexxa	016 025 028 029 030 031 032 033 034 107
Goldstar	020
Goodmans	025 035 036
Grundig	037 083
Harmon Kardon	010 038 039 040
Hitachi	006 024 041 042 043

CD

Innovatio	081 089 090 091 092 093 094 109 110 111 112 113 114 115
Intersound	015
JVC	044
Kenwood	026 029 045 046 047 100
Kodak	005
LG	020
Lifetec	081 089 090 091 092 093 094 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120
Linn	083
Luxman	048 049
Magnum	081 089 090 091 092 093 094 109 110 111 112 113 114 115
Marantz	051 052 083
Matsui	051 053 083
Mcintosh	054 055
Medion	081 089 090 091 092 093 094 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120
M-Electronic	050
Memorex	006 016 025 031 034
Meridian	083
Micromaxx	081 089 090 091 092 093 094 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120
Micromega	083
Microstar	081 089 090 091 092 093 094 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120
Mission	083
NAD	028 049 084 085 086 087
Naim	083
Nakamichi	056 057
Onkyo	002 058 059 060 061
Panasonic	018 019 062
Philips	003 063 064 082 083
Philips Cd-I	064
Philips Cd-V	002
Pioneer	030 034 099
PRO2	103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120
Proton	083
Quad	083
Realistic	006 016 031 032 107
Roadstar	050 063 065
Rotel	083
Saba	024
SAE	083
Samsung	102
Sansui	003 025 066 067 068 083
Schneider	001 017 083
Scott	016 025
Sharp	029 069 070 071
Sherwood	124
Siemens	072
Signature	010
Singer	118
Skymaster	121
Sony	028 073 074 075 088 095 096 097
Sunwood	015
Tandberg	083
TCM	081 089 090 091 092 093 094 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120
Teac	122
Technics	019 062 077 101
Telefunken	024
Tevion	081 089 090 091 092 093 094 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120
Theorie&Anwendung	123
Thomson	004 024
Toshiba	049 078 079
Universum	083
Vector Research	020
Victor	044
Welltech	107 108 112
Yamaha	069 076 080
Yorx	065

DVD(DVD/DVR)

Brand	DVD	DVR
Acoustic solutions	128	
Aiwa	129	
Akai	010 034 064	
Alba	130 131 132	
Ames	128	
Amstrad	130	
AMW	091	
Apex	132 133 134 135	
Arena	120	120
A-trend	136	
BBK	075 076 077 078 079 080 081 082 083 084 085 170	
Brandt	118	
Broksonic	137	
Bush	097 130 131 132 147	
Black diamond	130	
Centrum	138 139 140 141	
Cinevision	142	
Classic	128	
CMI	120	120
Crown	118	
Cybercom	102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124	120
CyberHome	042 068 136	
Cybermaxx	102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124	120
Cytron	102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124	120
Daewoo	070 091 171 172 173	
Daytron	143	
Denon	005 036 058	
Denver	131	
DIK	114	
Dmtech	144	
Dual	102 103 104 105 107 108 109 110 111 112 113 114 115 116 117 118 119 120 128 130 167	120
DVD 1024	145	
ECG	095	
Elita	146 147 168	
Emerson	142	
Ferguson	118	
Finlux	142	
Fisher	148	
GE	132	
Golden Sphere	108	
Goodmans	118 147	
Goldstar	142	
Go-Video	105	
Gradiente	118	
Grundig	011 158 169	
GVG	096	
Haaz	108 109	
Harman/Kardon	050 150	
H&B	110	
Himage	094	
Hitachi	009 025 030 043 063 127 163	127
HTY	086	
Initial	132	
Innovation	012 013 014 114 116 117 118	
JBL	150	
JVC	002 032 066	
Kawai	174	
Kendo	114 120	120
Kenwood	005 028 058	
KLH	132	
Konka	175 176 177 178	
Koss	118	
Labwave	023 048	
Lasonic	067 108	
Lecson	151	
Lenoxx	152	
LG	016 142 153	
Life	012 013 014 116 117 118	
Lifetec	012 013 014 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116	120

DVD(DVD/DVR)

Lifetec	117 118 119 120 121 122 123 124	
Limit	108	
Linn	035	
Loewe	011 039 158	
Magnavox	056 089 125 126 157	
Magnum	181 182 185 186	
Marantz	003 038 142 157 158 159	
Matsui	118	
Maxim	091	
MBO	154	
Medion	012 013 014 041 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124	120
Metz	009 024 163	
Mico	087 088	
Micromaxx	012 013 014 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124	120
Microsoft	155	
Microstar	012 013 014 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124	120
Mintek	132	
Mitsubishi	007 130	
Mustek	069 071 072 128	
NAD	027 142 162	
Nakamichi	156	
Noname	045	
Norcent	093	
Nortek	091	
Onkyo	015 029 065 149	
Optimus	059	
Orion	137	
Oritron	118	
Pacific	114	
Panasonic	005 006 017 022 036 051 054 055 058	
Panda	090	
Philco	053	
Philips	003 011 039 040 047 052 125 126 157 158 159	125 126
Philips magnavox	157 158 159	
Pioneer	009 024 026 059 062 163	
Prism	104	
PRO2	102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124	120
Proline	118	
Proscan	155	
Prosonic	160 161	
RCA	057 073 132 155	
Regal	179	
Reoc	108	
REX	138	
RTL	120	120
Saba	118	
Salora	142	
Sampo	108	
Samsung	008 030 063 105	
Sanyo	092 148	
Schneider	014 113 114 118 130 144 161	
SEG	108 130	
Sharp	012 013 116 162	
Sherwood	044	
Shinco	132	
Shinsonic	132	
Siltex	076	
Skymaster	098 099 100 101 128 147	
Sm electronic	128 147	
Sony	004 031 046 060	
Strong	091	
SVA	074	
Sunsui	137	
Supervision	147	
Sylvania	106	
TCM	012 013 014 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 180 184	120
Teac	108 132 163	
Technics	005 036 037 058 155	

DVD

Tevion	012 013 014 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 183 187 188 189 190	120
Techwood	162	
Theta digital	163	
Thomson	001 033 155	
Toshiba	003 049 137 157	
United	164 165	
Universum	130	
Vestel	179	
Wharfedale	151	
Xenius	115 118	125 126
Yamaha	005 036 058 061 125 126	
Yamakawa	166	
Zenith	142	
Others	018 019 020 021	

TAPE

Aiwa	008 009 010 126 127
Akai	015 079 089 099 100 110
Amstrad	082
Aswo	017
Braun	036
Bush	003
Daewoo	073
Denon	002 006 007 045 058 132
Diora	065 066
Dual	016 101 102
Fischer	059 060 071 129
Goldstar	128
Goodmanns	001
Goodmans	033
Grundig	017 021 026 134
Harman Kardon	057 092
Hitachi	045 081
ITT	084 085
JVC	011 028 029 123 124
Kenwood	014 083 098 101 102 116 121 122
Linn	054
Luxman	042 043 050 097
Magnavox	134
Marantz	017 053 088 134
NAD	069 070
Nakamichi	093
Nokia	086
Okano	113 114
Onkyo	012 013 022 067 068
Palladium	109
Panasonic	048 094 095
Philips	017 026 087 134
Pioneer	019 020 078 104 106 107 108
Radmor	053
Revox	027
Revox/Studer	017
Samsung	049 051 052 062 063
Sansui	134
Sanyo	071
Sanyo	072 096 103
Schneider	017 032 033 034 035 038 039 040 044 084 085 112 128
Sharp	005 030 116
Sherwood	056 074 075 076 077
Siemens	015 017 046 047 111 112 115 117 118 119 120 128
Sony	031 091 105 130 131 133
T+A	037 125
T+A Elektroakustik	125
Technics	004 055 064 094
Thomson	018
Universum	034 041 052 061 112 115
Yamaha	023 024 025 080 090

TUNER

Aiwa	006 007 048
Akai	026 077 089
Amstrad	081 093 097 098
Ash	053

TUNER

Aswo	056
Bush	042
Centrum	104
Cybercom	105 106 107
Cybermaxx	105 106 107
Cytron	105 106 107
Daewoo	087
Denon	001 002 031 052 074 100
Diora	090
Dual	011 025 105 106
Elta	108 109
Fischer	063
Goldstar	004
Goodmanns	077
Goodmans	042
Grundig	056 058 110
Harman Kardon	084
Hitachi	031 082
ITT	030
JVC	044 073 076
Kenwood	025 066 068 071 075
Lifetec	105 106 107
Linn	101
Luxman	067 103
Marantz	056 110
Medion	105 106 107
Microstar	105 106 107
Micromaxx	105 106 107
Minowa	039
Mission	018
NAD	088
Nakamichi	049
Nokia	040
Noname	042
Okano	079 092
Onkyo	055 069
Palladium	080
Panasonic	001 061
Philips	056 110
Pioneer	010 013 014 065
PRO2	105 106 107
Radmor	057
Revox	016
Revox/Studer	056
Rotel	008
Sansui	110
Samsung	009 041 078 094 102
Sanyo	022 062
Schneider	004 018 020 021 023 024 028 029 030 032 033 034 037 038 039 042 070 072 080 089 092 093 098
Sharp	003 075
Sherwood	043 085 086
Siemens	004 018 036 037 047 056 077 087 092 095 099
Sinotec	024
Sinotec(Pepsi-Dose)	024
Sony	019 046 050 051
Supertech	042
T+A	035 054
T+A Elektroakustik	054
TCM	105 106 107 111
Teac	112 113
Technics	017 059 060 091
Tevion	105 106 107
Theorie&anwendung	114
Thomson	012
Uher	005
Universum	033 077 092 096 102
Yamaha	015 027 045 064 083


AUX(AMP/LD/VCD/OTHER)


Brand	AMP	LD/VCD/OTHER
ADT		161
Aiwa	028 128 129	181 182
Akai	018 112 121	
Amplifier	158	
Amstrad	014 034 077 086 145	
Arion		162
ASH	027	
Aswo	043	

AUX(AMP/LD/VCD/OTHER)

Audio Comb1		040 190
Braun	104	
Bush	032 116	
CD Photo		039
CDR		041 191
CD Video		038
Cpremier		195
Cybercom	169 170 171	173 174 175 176 177 178
Cybermaxx	169 170 171	173 174 175 176 177 178
Cytron	169 170 171	173 174 175 176 177 178
Daewoo	022	194
Denon	020 080 098 131 139	001
Diora	081	
Disco Vision		003
DMT		161
Dual	062 124 169 170	173 174 175 176 183 179
DBS		176 184
Elta		
Fischer	021 085 134	
Fujitec		195 196
Goldstar	029	
Gold Vision		166 167
Goodmanns	015 018 032	
Grundig	043 142 148	005 043 044 046
Harman Kardon	091	
HDT		159
Hitachi	098	003
Home automation		192
ITT	073	
JBL	068 118	
JVC	067 146 150	
Kawai		195 196 197 198 199 200
Kenwood	023 062 156	062
Lifetec	169 170 171	173 174 175 176 177 178
Linn	043 148	043
Luxman	099 100 149 152	
Magnavox		046
Magnum		201
Marantz	043 148 153	043 044 046
Medion	034 169 170 171	173 174 175 176 177 178
Meridian	148	043
Micromaxx	169 170 171	173 174 175 176 177 178
Microstar	169 170 171	173 174 175 176 177 178
Minowa	013	
Mission	155	
Mitsubishi		005
NAD	048	005 047 048 049 050
Naim		043
Nakamichi	069	
Niam	148	
Nokia	072	
Noname	032	
Okano	016 017	
Onkyo	024 125	
Palladium	033 090 133	
Palladium/Okano	143	
Panasonic	136 138 141	
Philips	043 101 140 148 153 154	004 006 043 044 045 046
Pioneer	011 119 148	003 005 043 055 185
Premier		195 196
PRO2	169 170 171	173 174 175 176 177 178
Quad	148	043
Radiola		006
Radiotone	087	
Radix		160
Radmor	140 153 154	
Revox	089 120	
Revox/Studer	101 153 154	
Rotel	126 127	
Saba	151	

  [illegible]





- Operate your TV,VCR,SAT,CATV,DVD,RCVR,AUX
- Eliminate the clutter of up to 8 remote control
- Preprogrammed for easy set up: DEV+SET=READY
- Preprogrammed for quick search

OPERATES ALL BRANDS

ABC	Concerto	Harley Davidson	Melz	Rampage	Tashiko
Acre	Contec/Cony	Hamman Kardon	MGA/Mitsubishi	Randex	Tatung
Acoustic Research	Coronado	Harvard	MGN Technology	Radio Shack	Tay Shoen
ADC	Craig	Harwood	Micro Formula	Radix	Teac
ADCOM	Crown	Hawaii	Midland	Randtek	Technics
Addison	Curtis Mathes	HCM	Mina	RCA	Technosat
Admiral	CXC	Head Quarter	Minolta	Realistic	Technovision
Adventura	Cybernex	Hinari	Mission	Regal	Techwood
Aelanta	Dae Ryung	HI-Q	Motorola	Regency	Teco
AEON	Daewoo	Hisawa	Montgomery Ward	Rembrandt	Tedalex
Aiko	Dansai	Hitachi	Movie Time	Rhapsody	Teknika
Aiwa	Daytron	Hwalin	Minutz	Ricoh	Telecaption II
Akai	DBS	Hypson	MTC	Rotel	Telefunken
Akiba	Decca	Hyundai	MultiTech	Runco	Telerent
Alfa Gold	De Graaf	IEEC	Multivision	SABA	Televlew
Aileron	Denon	Ima	Myland	SAE	Tera
Amark	Diamond	IMC	NAD	Saisho	Texscan
Ambassador	Disco Vision	Imperial	NEC	Salora	Theta Digital
American High	Distar	Infinity	Nesco	Sampo	Thomson/PreScan
Amstrad	Drake	Inkel	Newave	Samsung	TMK
Amusewell	DSS	Instant Replay	Nikko	Samsux	Tocom
Anam	Dual	Interfunk	Noblex	Sanky	Tomashi
Anitech	Dumont	ITT	Nokia	Sansui	Toshiba
Anvision	Dynamic Bass	Janel	Novavision	Sanyo	Tosonic
AOC	Dynatech	Jasco	Nordmende	Schaub Lorenz	Television
APC	Eagle	JBL	NSC	Scientific Atlanta	Trans PX
Archer	Eastern	JCB	NSM	Scimitu	Tri-vision
ASA	Echostar	JCL	NTC	Scotch	Tri-Lex
Asha	Electroband	JCA Penney	OAK	Scott	Triumph
ASIA Giant	Electrohome	Jean	Olympus	Sears	Turtlex
Asuka	Electrohome	Jebsen	Omega	Sega	Tusa
ATL	Emerex	Jensen	Onking	SEI	TV86
Audio Dynamics	Emerson	JVC	Onkyo	SET	UAMEN
Audiovox	Envision	Kaisut	Onwa	Sharp	Uniden
AWA	Ether	Kale vision	Optimus	Sherwood	Unika
Baird	Eurostar	Kawasho	Optonica	Shinco	Unitech
Basic Line	Everquest	KEC	ORBIT	Shintom	United cable
Beaumont	Ferguson	Kenwood	Orion	Shogun	United Satellite
BESTLINK	Fidelity	KLH	Pace 500	Sigma	Universal
Belcor	Finlandia	Kloss Novabeam	Pace 5000	Signal	UPMOST
Bell & Howell	Finlux	KMC	Pacific	Signature	Veccom
BENJAMIN	Firstline	Kodak	Panasonic	Simpson	Vector Research
Blaupunkt	Fisher	KOKA	Panda	Singer	Victor
Blue Star	Fortec Star	Kolin	Pansat	Sinudyne	Videoccon
BPL	Fuji	KONKA	Paragon	Sky Giant	Video Concepts
Bradford	Funai	Krell	Pather	SU Marx	Videosonic
Brocksonic	Funtech	KTV	PSI	Sony	Videotronic
Bush	Futu ch	Kyocera	Pentax	Soundesign	Videoway
Cablestar	GAB	Legend	Philco	Sowa	Vidikon
California Audio	Garrard	LEON	Philips	Spectricon	Vidtech
Calix	GE	L/G	Pilco	Sprucer	Viewstar
Canon	GEC	Lloyd	Pilot	Squareview	Viking
Candle/Citizen	Gemini	Lloytron	Pioneer	SSS	Visa
Capehart	General	Loewe	Polestar	Standardcomponent	Vortec
Caravell	G.I.J.d	Lodgenet	Popular Mechanic	Starcom	Walmar
Carver	Gibraltar	Logik	Portland	Stargate	Warner Amex
Casio	Gintai	Luxman	Praxis	Starlite	Wards
CCE	GMI	Luxor	Premier	Starquest	Warion
Celebrity	Golden	EXT	Priceclub	STS	Winer
Centurion	Goldstar	Macom	Primestar	Sun Moon Star 2400	WISO
CCE	Goodmans	Magnavox	Proline	Supra	XR-1000
Changhong	Go Video	Magnin	Prosat	Supre-Macy	Yamaha
Channel Master	Gradiente	Majestic	Protec	Supreme	Zenith
Chaparral	Graetz	Marantz	Proton	Sylvania	Zenitec
ChunYun	Granada	Marta	Prism	Symphonic	Zonda
Chung Hsin	Grandin	Matsui	Pulsar	Synco	other
Cimline	Grundig	Matsushita	Pulser	TADA	
Clairtone	Grunpy	MCS	OED	Tadran	
Colortyme	Haitai	Megatron	Quarter	Taicom	
colour Voice	Hallmark	MEI	Quartz	Tai Wah	
Colt	Hamlin	Memorex	Quasar	Tandy	

OPERATES ALL BRANDS