


# secura

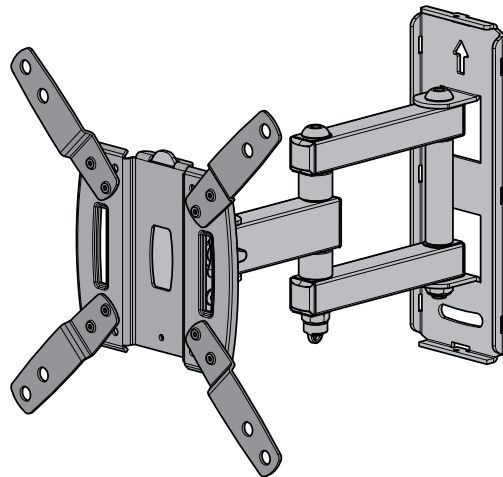

## QSF210 INSTRUCTION MANUAL

### **We'll Make It Stress-Free**

If you have any questions along the way, just give us a call.  
1-800-359-5520. (UK: 0800 056 2853) We're ready to help!



**CAUTION: IMPORTANT SAFETY INSTRUCTIONS — PLEASE READ ENTIRE MANUAL PRIOR TO USE — SAVE THESE INSTRUCTIONS**

**Before getting started, let's make sure this mount is perfect for you!**

**1**

**Does your TV (including accessories) weigh *MORE* than 25 lbs. (11.3 kg)?**



**No?** Perfect – you may continue.

**Yes?** This mount is NOT compatible.


Visit [secura-av.com](http://secura-av.com) or call 1-800-359-5520 (UK: 0800 056 2853) to find a compatible mount.



**CAUTION:** DO NOT exceed the maximum weight indicated. This mounting system is intended for use only with the maximum weights indicated. Use with products heavier than the maximum weights indicated may result in collapse of the mount and its accessories, causing possible injury.

**2**

**What is your wall made of?**

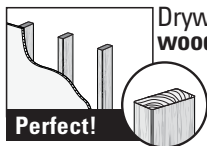

Drywall with wood studs?



Solid concrete or concrete block?



**Unsure?**

**Call Customer Service:**  
1-800-359-5520  
(UK: 0800 056 2853)

**3**

 
**Do you have all the tools needed?**



Tape Measure



Pencil



Level



Screw driver



Electric Drill



1/2 in. (13 mm)  
Socket Wrench

**Wood Stud Install**



Stud Finder



Awl



7/32 in. (5.5 mm)  
Wood Drill Bit

**Concrete Install**



3/8 in. (10 mm)  
Masonry Drill Bit



Hammer

**4**

**Ready to begin?**

Please read through these instructions completely to be sure you're comfortable with this easy install process. Also check your TV owner's manual to see if there are any special requirements for mounting your TV.

If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, contact Customer Service at 1-800-359-5520 (UK: 0800 056 2853).




**CAUTION:** Avoid potential personal injury or property damage!

- This product is designed for use in wood stud, solid concrete, and concrete block walls - DO NOT install into drywall alone
- The wall must be capable of supporting five times the weight of the TV and mount combined
- Do not use this product for any purpose not explicitly specified by manufacturer
- Manufacturer is not responsible for damage or injury caused by incorrect assembly or use


# Dimensions

in.  
[mm]


## TV INTERFACE

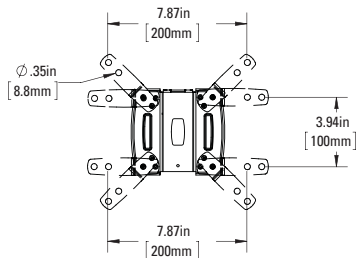


## WALL PLATE

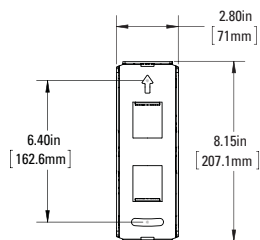

## FULLY ASSEMBLED MOUNT

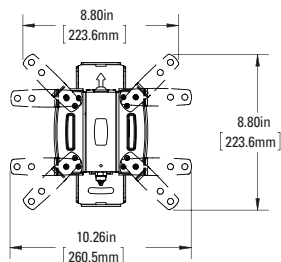


## TOP VIEW - EXTENDED

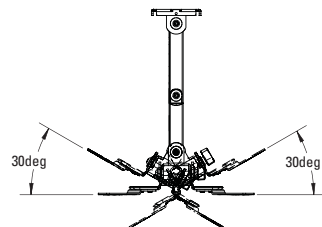


30° SWIVEL LEFT AND RIGHT WITH AN APPROXIMATE 32" TV


## TOP VIEW - RETRACTED

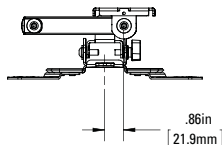


## 3-D

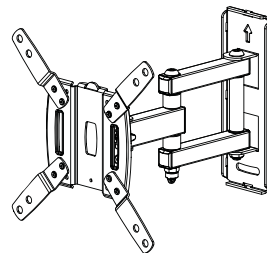

## SIDE VIEW - EXTENDED

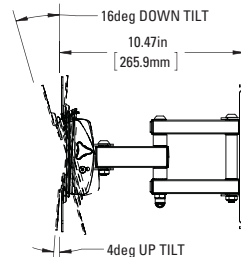

## SIDE VIEW - RETRACTED

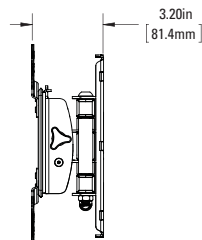


# Supplied Parts and Hardware

**⚠ WARNING:** This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

**NOTE:** Not all hardware included will be used.


## STEP 1 Parts and Hardware

TV Bracket

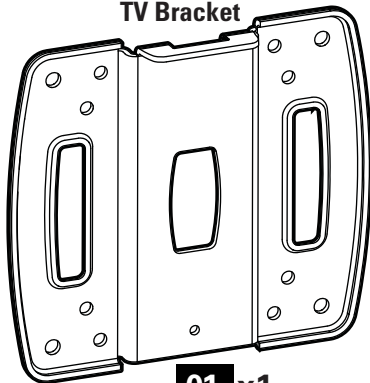

**01** x1

 TV Bracket  
Extenders



**02** x4

TV Bracket Screws  
(TV Bracket extenders)



M4 x 8mm  
**03** x8

TV Screws



 
M4 x 12mm  
**04** x4



M6 x 12mm  
**05** x4



M8 x 16mm  
**06** x4



M8 x 20mm  
**07** x4



M4 x 35mm  
**08** x4




M6 x 35mm  
**09** x4



M8 x 35mm  
**10** x4


Washers

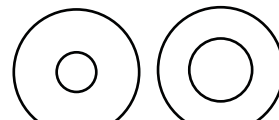

M4  
**11** x4

M6/M8  
**12** x4

Spacers

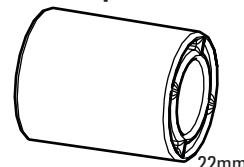


**13** x4

22mm



## STEP 2 Parts and Hardware

Wall Plate Assembly

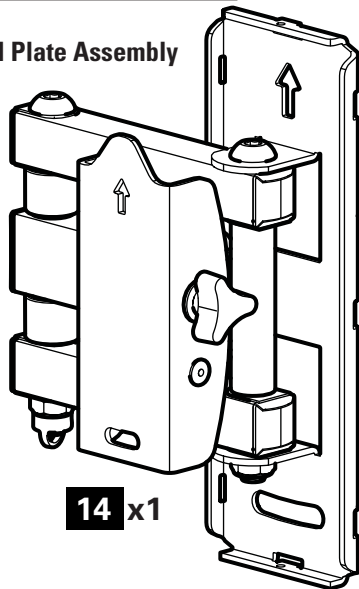

**14** x1

### For concrete installations ONLY

**⚠ CAUTION:** Do not use in drywall or wood  
**Concrete Anchors**



Fischer UX 10 x 60R

**15** x2

Lag Bolt Washers

 
**16** x2



.695 x .350 x .075 in.

Lag Bolts

**17** x2




5/16 x 2 3/4 in.

## STEP 3 Parts and Hardware

 
Securement Screw

**18** x1



Securement Washer


**19** x1

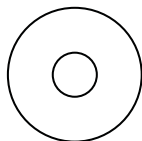

## Additional Parts and Hardware

Cable Ties


**20** x3

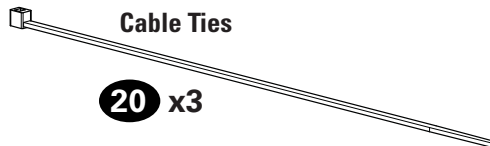

Allen Key

7/32 in.

**21** x1

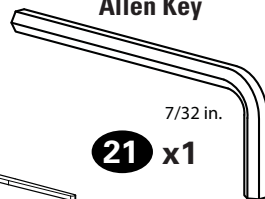

# STEP 1 Attach TV Bracket to TV

## 1.1 Measure Your TV Hole Pattern

Measure the width and height of your TV hole pattern in mm.

Record your measurements:


Width \_\_\_\_\_ mm x Height \_\_\_\_\_ mm

75 mm = 7.5 cm = 3 in.

100 mm = 10 cm = 4 in.

200 mm = 20 cm = 7 7/8 in.

inch dimensions approximate

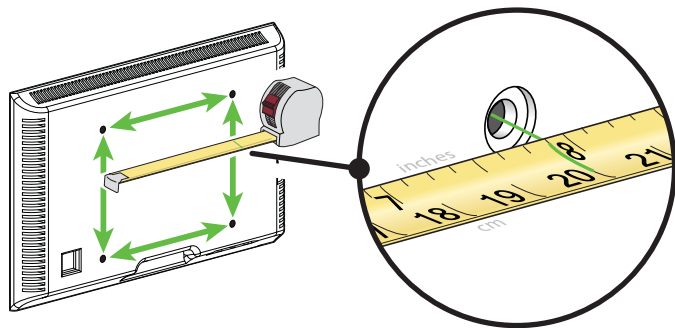

## 1.2 Assemble Your TV Bracket

Determine which TV bracket configuration to use, A, B, or C based on your TV hole pattern measurements.



**A**

Dimensions in mm

TV Hole Pattern  
Measurement

**75 x 75**

**100 x 100**

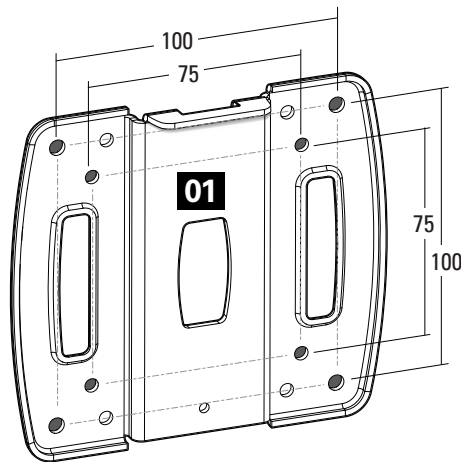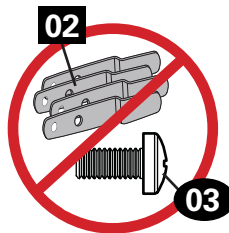


These smaller hole patterns only use TV bracket **01**.

Do not use the four TV bracket extenders **02** and eight screws **03**.

**B**


Dimensions in mm

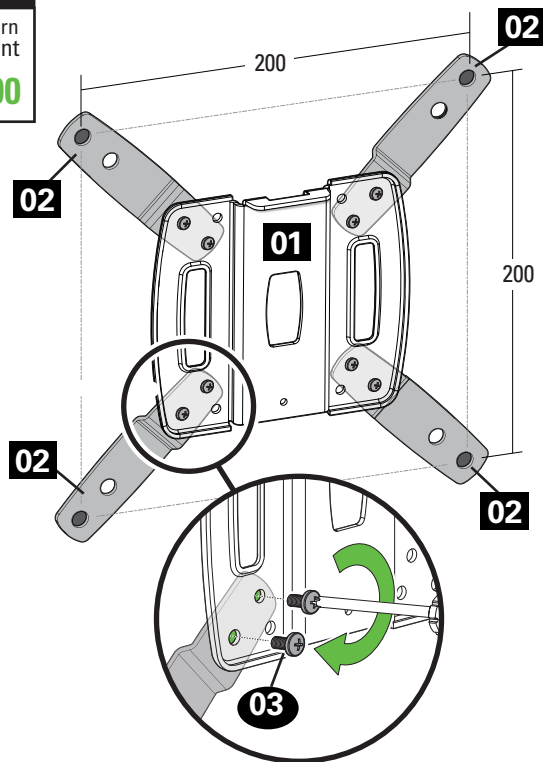TV Hole Pattern  
Measurement**200 x 200**

Assemble TV bracket extenders **02** onto TV bracket **01** as illustrated.  
Secure using eight screws **03** in the corner holes shown.

**C**


Dimensions in mm

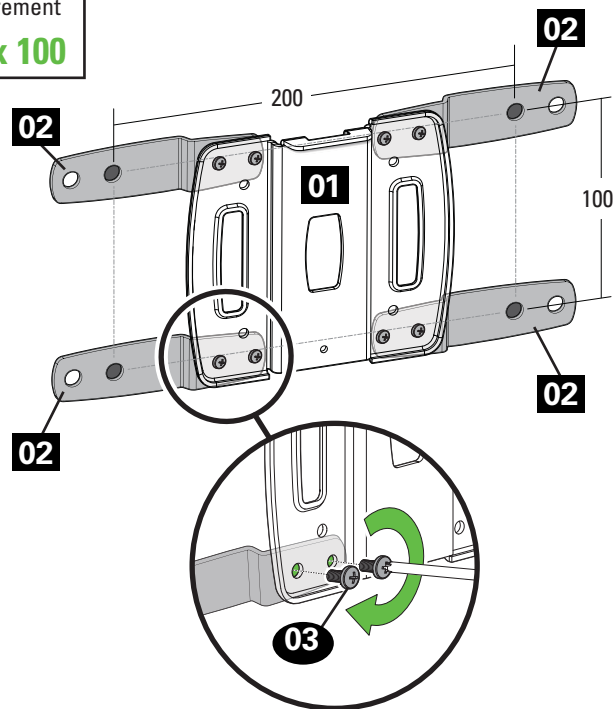TV Hole Pattern  
Measurement**200 x 100**

Assemble TV bracket extenders **02** onto TV bracket **01** as illustrated.  
Secure using eight screws **03** in the corner holes shown.

## 1.3 Select TV Screw Diameter

Hand thread screws into the threaded inserts on the back of your TV to determine which screw diameter (M4, M6 or M8) to use.

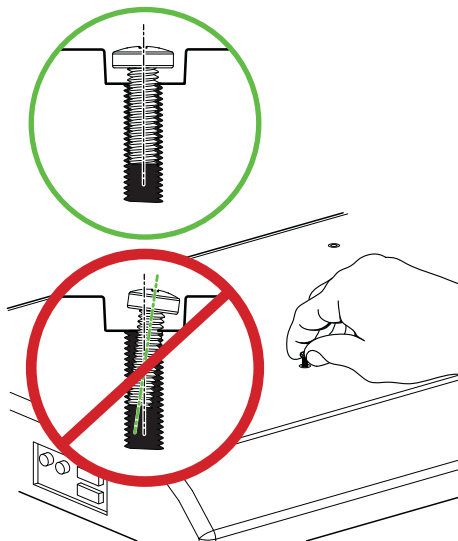


## 1.4 Select TV Screw Length

If your TV has a flat back, use the shorter screws.

Spacers and longer screws are supplied to accommodate:

- irregular / round back TVs
- TVs with inset mounting holes
- extra space needed for cables

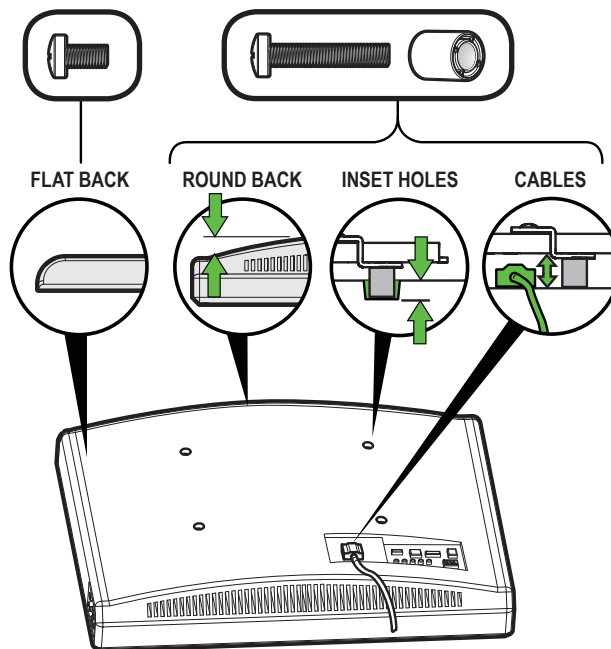


Standard configurations are shown. For special applications, or if you are uncertain about your hardware selection, contact Customer Service at 1-800-359-5520.


### ⚠ CAUTION:

Verify adequate thread engagement with your screw/washer/spacer combination AND TV bracket. (STEP 1.5)



- Too short will not hold the TV.
- Too long will damage the TV.

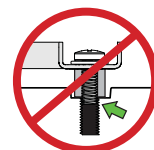

Too Short

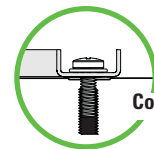

Correct

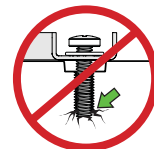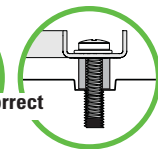


Too Long

## 1.5 Attach TV Bracket

Position your TV bracket configuration (A, B, or C) over your TV hole pattern - making sure the bracket is centered over the TV hole pattern and level.


**⚠ CAUTION:** Avoid potential personal injuries and property damage! DO NOT use power tools for this step. Tighten the screws only enough to secure the TV bracket to the TV. DO NOT overtighten the screws.

**! IMPORTANT:** Ensure TV bracket is securely fastened before moving on to the next step.

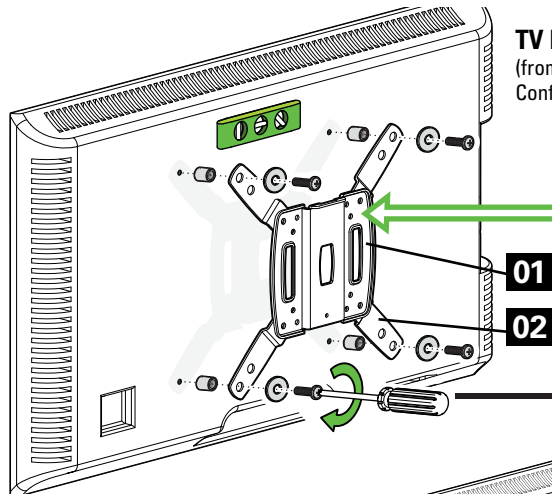


**TV Bracket Configurations B and C**  
(from page 7)  
Configuration B Illustrated, with spacers

**NOTE:** For 200 x 200 or 200 x 100 hole patterns, you may need to loosen the screws 03 to align the bracket extenders 02. After bracket extenders 02 are secured to the back of your TV, re-tighten screws 03.

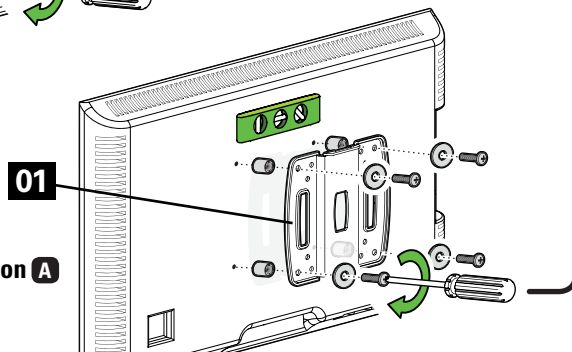


**TV Bracket Configuration A**  
(from page 6)  
Illustrated with spacers

### Flat Back

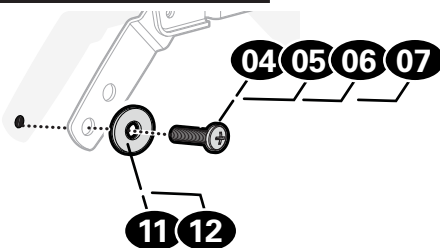

### Round Back / Extra Space

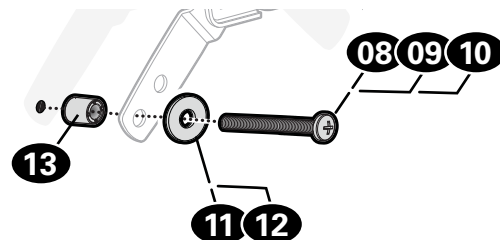

# STEP 2A Attach Wall Plate to Wall




## Wood Stud Option

**⚠ CAUTION:** Avoid potential personal injury or property damage!


- Drywall covering the wall, must not exceed 5/8 in. (16 mm)
- Minimum wood stud size: common 2 x 4 in. (51 x 102 mm) nominal 1½ x 3½ in. (38 x 89 mm)
- Stud center must be verified

1. Locate your stud. Verify and mark the center of the stud by finding the stud edges using an awl, a thin nail, or an edge to edge stud finder.
2. Position the wall plate assembly **14** at your desired height and line up the holes with your stud center line. Level the wall plate assembly **14** and mark the hole locations.
3. Drill pilot holes using a 7/32 in. (5.5 mm) diameter drill bit.

**⚠ IMPORTANT:** Pilot holes must be drilled to a depth of 3 in. (75 mm). Be sure to drill into the center of the stud.

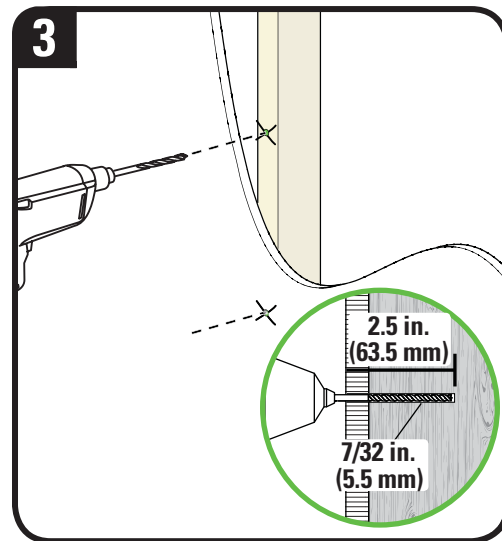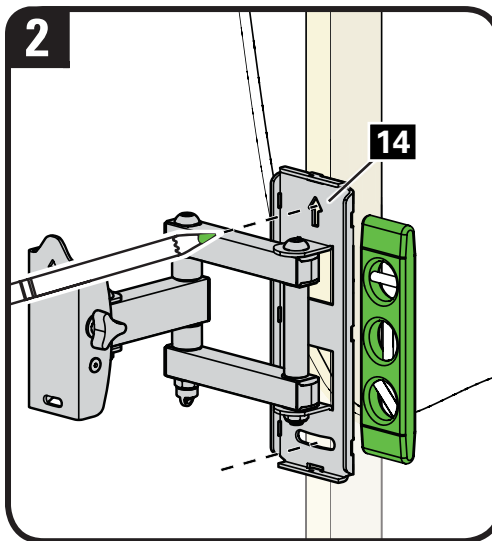
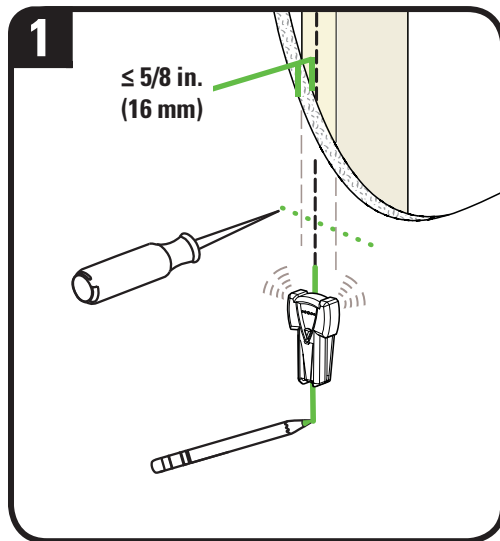


4. Install wall plate assembly **14** using two lag bolts **17** and two washers **16**. Tighten the lag bolts **17** only until the washers **16** are pulled firmly against the wall plate assembly **14**.

 **NOTE:** If needed, you can make small level adjustments to the wall plate assembly **14** by loosening the bottom lag bolt **17** and shifting the wall plate assembly **14** until level. Tighten the bottom lag bolt **17** when adjustments are complete.

**⚠ CAUTION:** Avoid potential personal injury or property damage! All lag bolts **17** MUST BE firmly tightened to prevent unwanted movement of the wall plate assembly **14**. Ensure the wall plate assembly is securely fastened to the wall before continuing on to the next step.

Go to STEP 3 on PAGE 14.

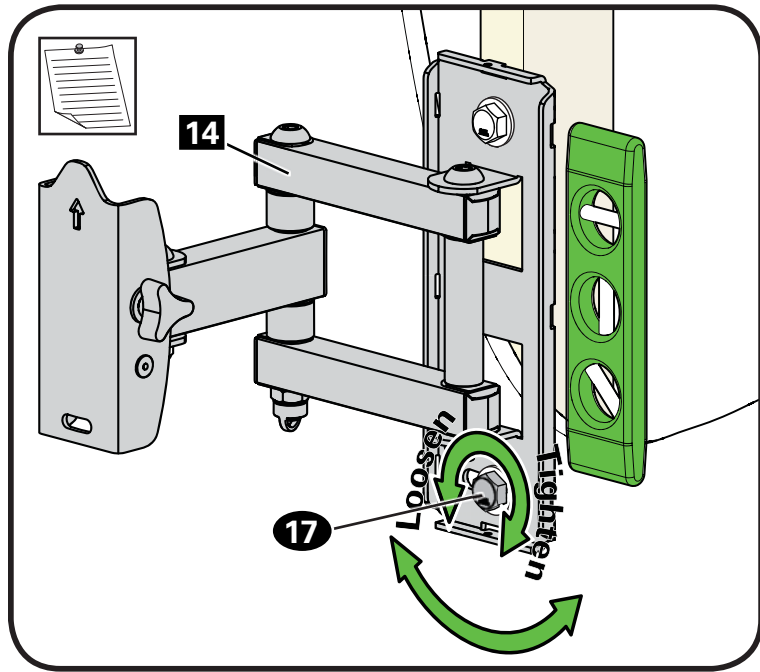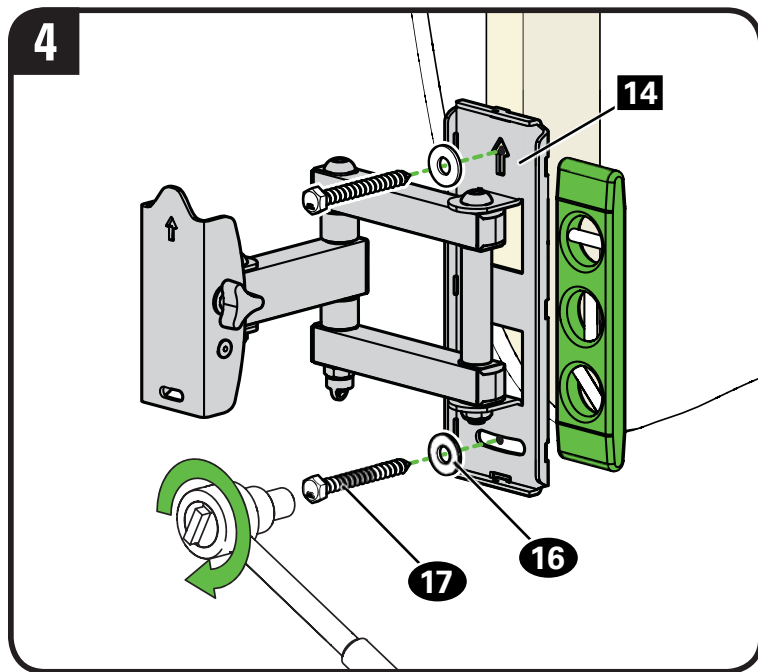



## STEP 2B Attach Wall Plate to Wall Solid Concrete or Concrete Block Option

**⚠ CAUTION:** Avoid potential personal injury or property damage!

- Mount the wall plate assembly **14** directly onto the concrete surface.
- Minimum **solid concrete** thickness: 8 in. (203 mm)
- Minimum **concrete block** size: 8 x 8 x 16 in. (203 x 203 x 406 mm)

1. Position the wall plate assembly **14** on the wall at your desired height. Level the wall plate assembly **14** and mark the hole locations.
2. Drill two pilot holes using a 3/8 in. (10 mm) diameter masonry drill bit.

**❗ IMPORTANT:** Pilot holes must be drilled to a depth of 3 in. (75 mm). Never drill into the mortar between blocks.

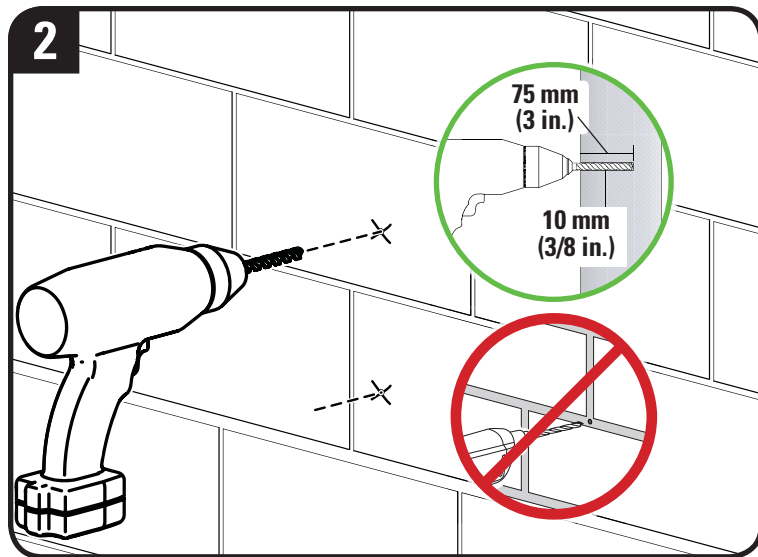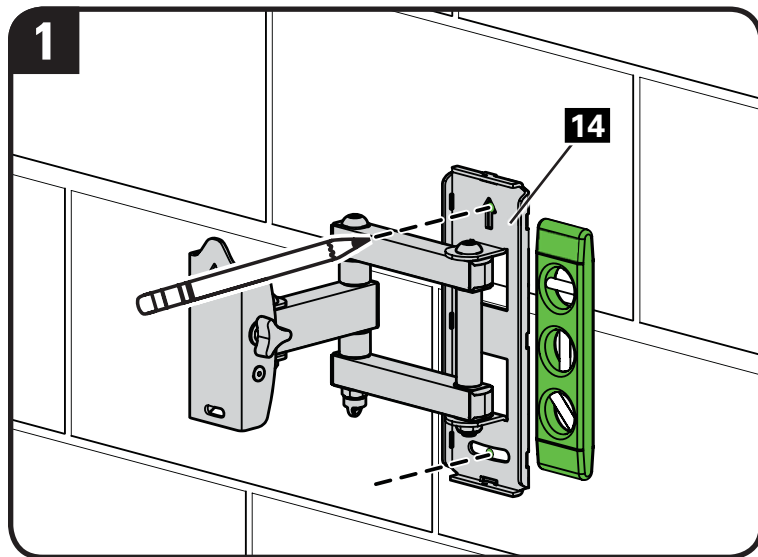





3. Insert two anchors **15**.

**⚠ CAUTION:** Be sure the anchors **15** are seated flush with the concrete surface.

4. Install wall plate assembly **14** using two lag bolts **17** and two washers **16**. Tighten the lag bolts **17** only until the washers **16** are pulled firmly against the wall plate assembly **14**.

**📄 NOTE:** If needed, you can make small level adjustments to the wall plate assembly **14** by loosening the bottom lag bolt **17** and shifting the wall plate assembly **14** until level. Tighten the bottom lag bolt **17** when adjustments are complete (see page 11).

**⚠ CAUTION:** Avoid potential personal injury or property damage! All lag bolts **17** MUST BE firmly tightened to prevent unwanted movement of the wall plate assembly **14**. Ensure the wall plate assembly **14** is securely fastened to the wall before continuing on to the next step.

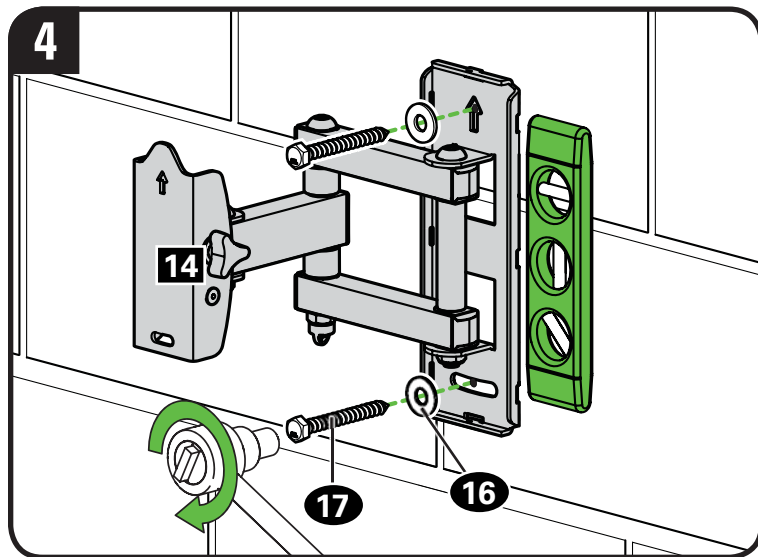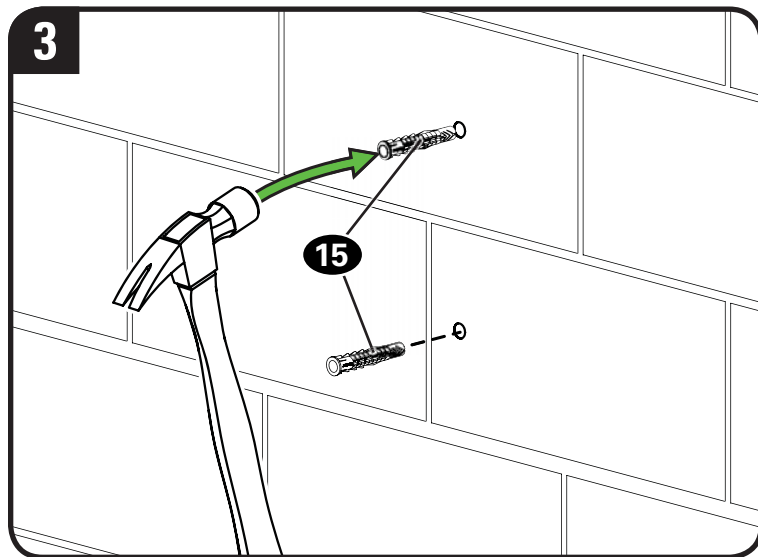




## STEP 3 Hang TV onto Wall Plate



**HEAVY!** You may need assistance with this step.

1. Position the arm of wall plate assembly **14** so the elbow is bent 90 degrees and pressed against the wall.
2. Hang the TV onto the arm of wall plate assembly **14** by first hooking the top support, then resting the TV into place.
3. Lock the TV to the wall plate assembly **14** with securement screw **18** and securement washer **19**.


**⚠ CAUTION:** Avoid potential personal injuries and property damage! This securement screw **18** must be installed to secure the TV onto the wall plate assembly **14**.

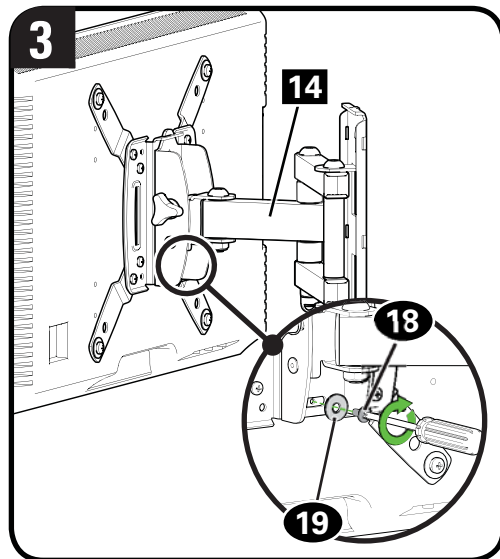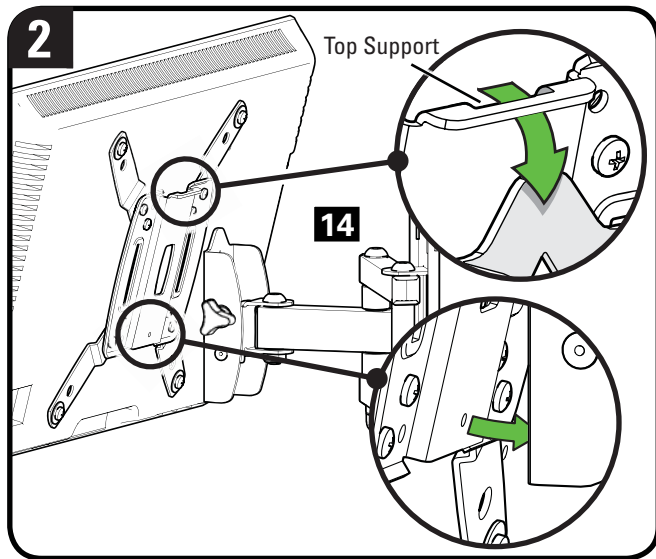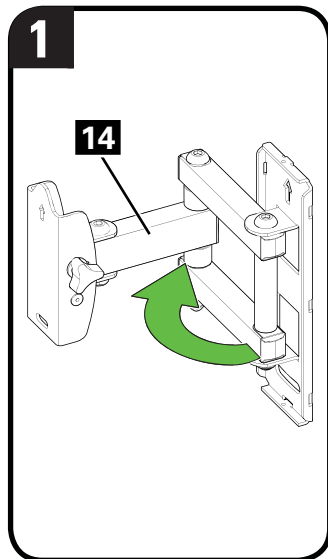

# Manage Cables

If desired, thread a supplied cable tie **20** through the loop provided on the arm of the wall plate assembly **14**, and secure your TV cables along the arm for a clean look.

**! IMPORTANT:** Fully extend the arm of wall plate assembly **14** to ensure you have enough slack in the cables for full TV movement.

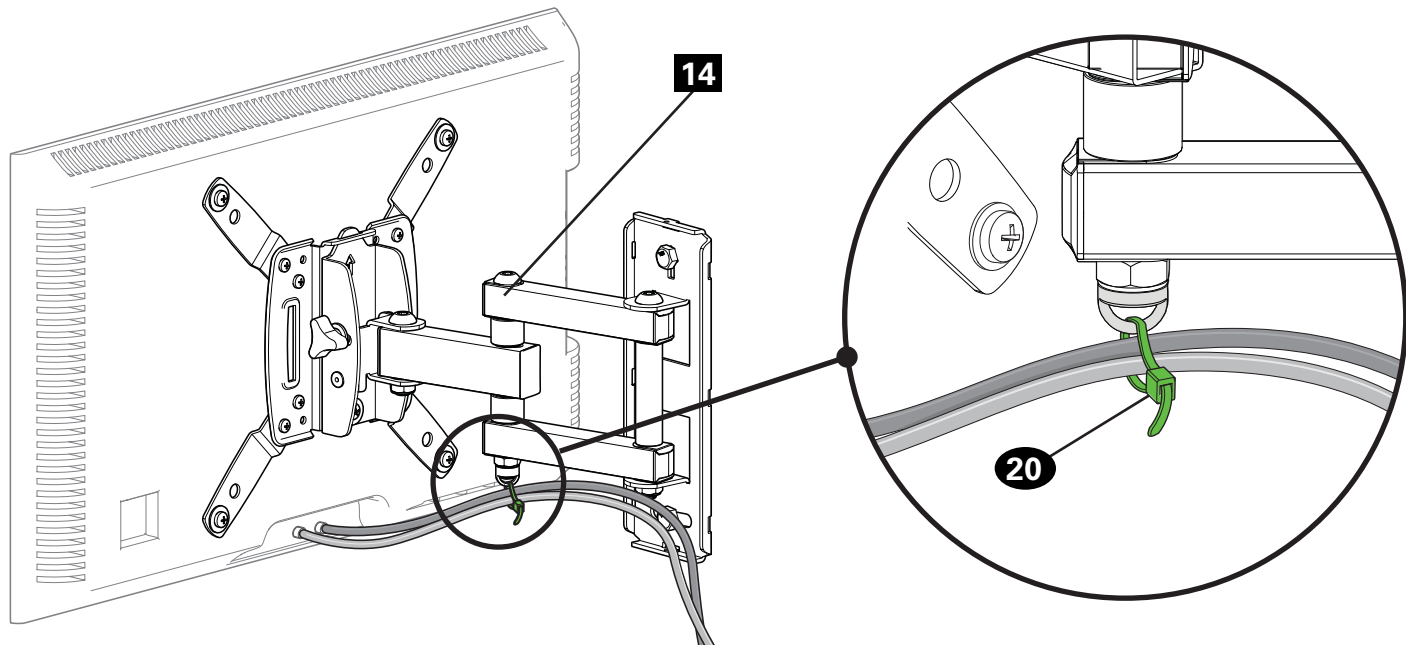

# TV Adjustments




## TILT ADJUSTMENT

Your TV should adjust easily when moved, then stay in place.

If your TV is too loose or too tight, adjust the tilt tension knob by hand.




**NOTE:** Once your TV is in place, tighten the tilt tension knob to prevent unwanted movement.

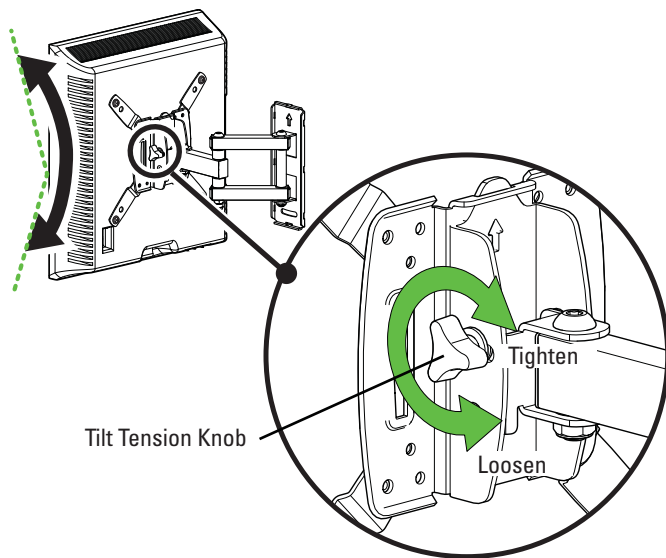

## LEVEL ADJUSTMENT

To adjust the leveling of your TV, loosen the securement screw **18**, level your TV, then tighten securement screw **18**.

**! IMPORTANT:** This securement screw **18** must be installed to secure the TV onto the wall plate assembly **14**.

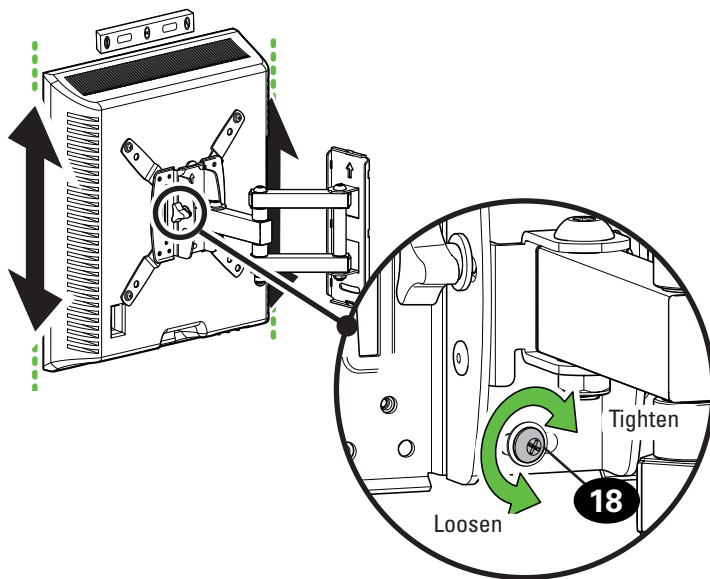




## SWIVEL ADJUSTMENT

Your TV should adjust easily when moved, then stay in place.


If your TV is too loose or too tight, adjust the arm tension screws using hex key **21** and a 14 mm (9/16 in.) socket.

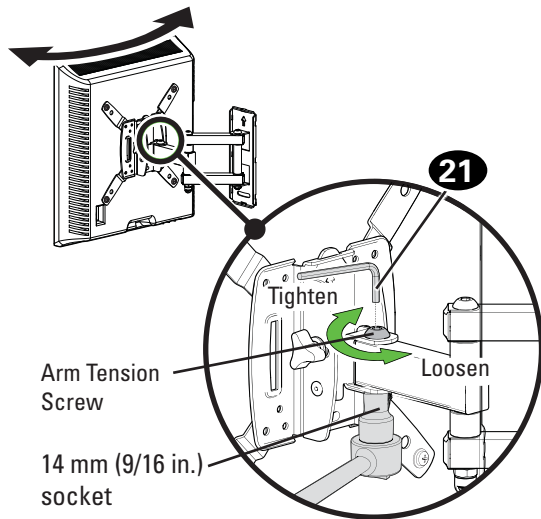

## EXTENSION/RETRACTION ADJUSTMENT

Your TV should adjust easily when moved, then stay in place.

If your TV is too loose or too tight, adjust the arm tension screws using hex key **21**.

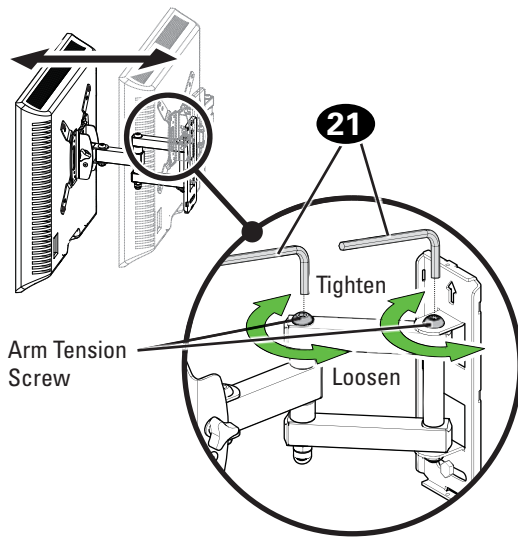


## REMOVING THE TV




**HEAVY! You may need assistance with this step.**

To remove your TV from the wall plate assembly **14**, disconnect all cables and then reverse the procedures in STEP 3.

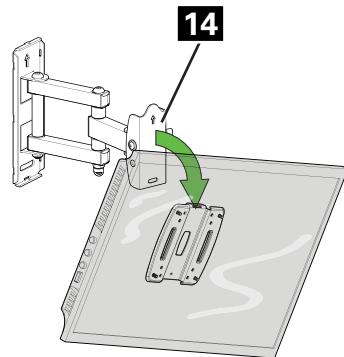

# Features

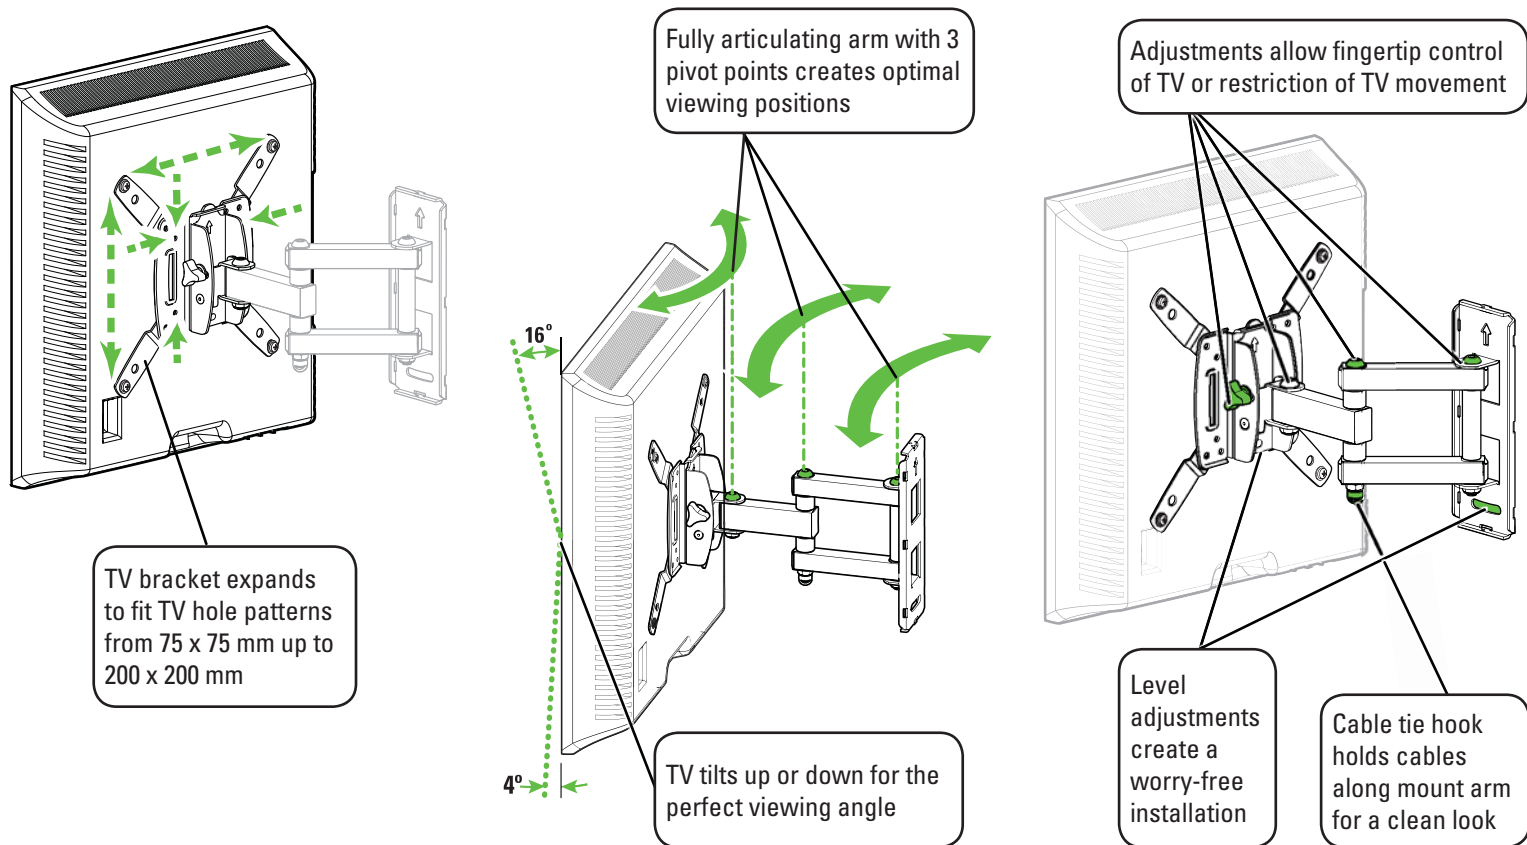



# Secura

Thank you for choosing Secura! Please take a moment to let us know how we did:



Email us: [info@secura-av.com](mailto:info@secura-av.com)



Call us: 1-800-359-5520

UK: 0800 056 2853

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

©2016 Milestone AV Technologies. All rights reserved. Secura is a brand of Milestone.

All other brand names or marks are used for identification purposes and are trademarks of their respective owners.