


### INSTALLATION MANUAL

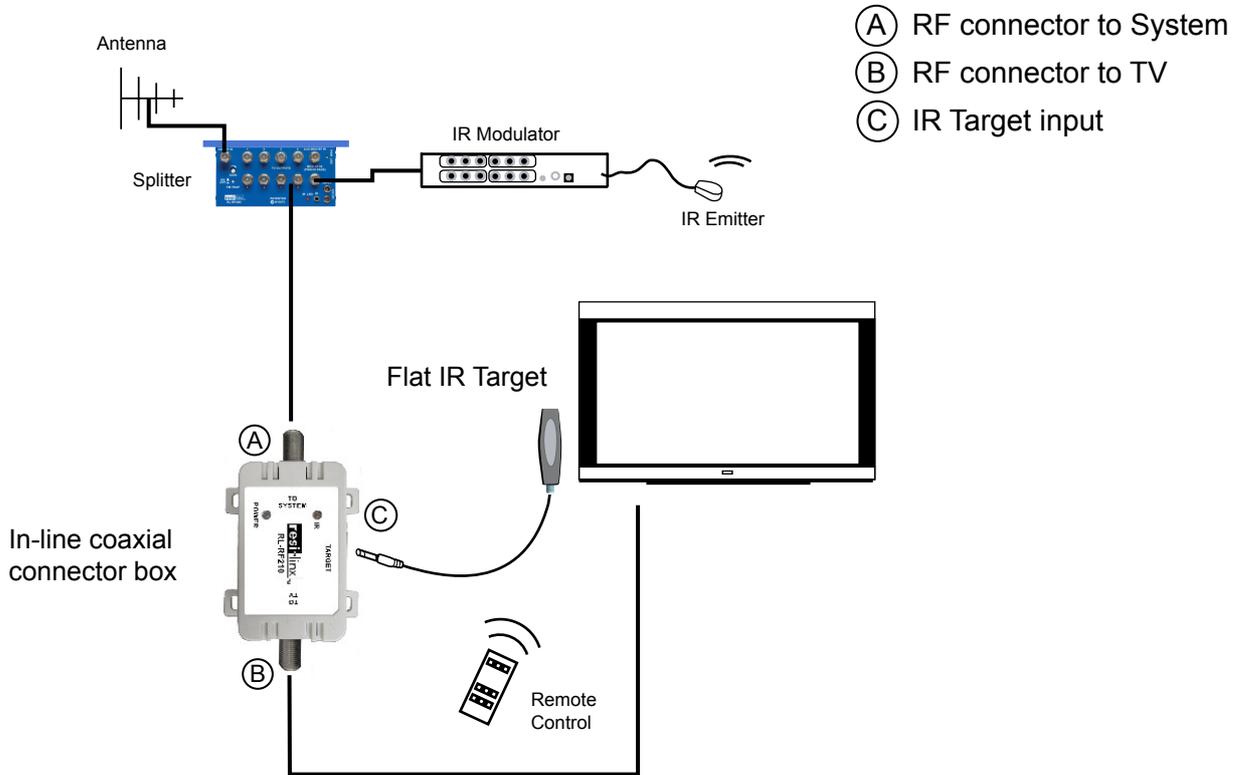

#### Hardware Connection

1. Connect coaxial cable from splitter (wallplate) to RF connector (A) labelled To System. Connect RF connector (B) to TV antenna input.
2. Connect Flat IR Target to the input on the side of the Connector Box (C).  
NOTE: Connector box is powered remotely by modulator.
3. Place the target in a position to receive IR commands. LED indicator on both IR Target and Connector Box illuminate briefly upon receipt of IR command.
4. Use RL-ACC150 Target Mount (not supplied) for more discrete installations.

IR Frequency Range	30-100kHz
RF Frequency Range	50Mhz ~ 900Mhz
Operating Voltage	5V
Cable requirement	Coaxial
Maximum Target reception distance	Up to 6 metres

(Refer to [www.resi-linx.com](http://www.resi-linx.com) for further information).

#### WARRANTY

Vcomm Pty Ltd states that the warrant that the customer can rely on is that provided by the manufacturer. In the event of any warranty claim please contact us and we will forward it to the manufacturer. The manufacturer will then determine the extent of their liability. This expressly negates, to the extent possible by Australian law, any warranty reliance on Vcomm Pty Ltd.

Vcomm Pty Ltd  
ACN: 091 281 524  
ABN: 99 091 281 524